

24. Immobilizer Control Module

A: NOTE

The control of immobilizer system is carried out in body integrated unit. Refer to the section on the body integrated unit for the work procedures.

- Removal: <Ref. to SL-48, REMOVAL, Body Integrated Unit.>
- Installation: <Ref. to SL-48, INSTALLATION, Body Integrated Unit.>