



25. Immobilizer Antenna

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column cover lower.

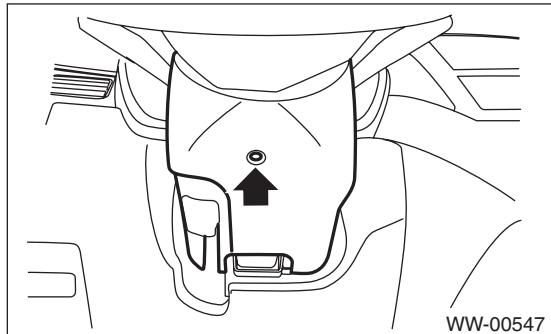

- 3) Remove the harness cover lock.
- 4) Remove the screws and detach the knee protector.

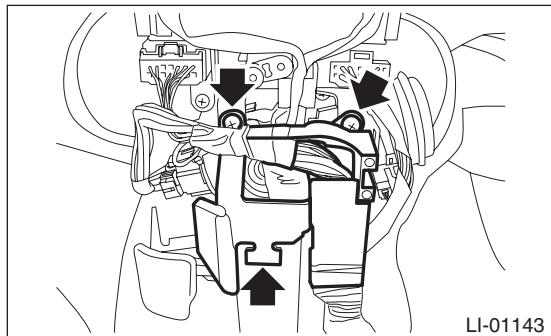

- 5) Remove the screws and remove the steering column cover upper.

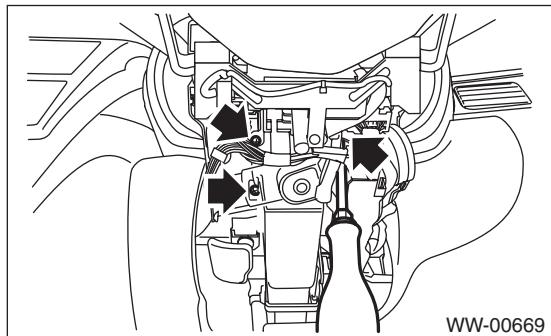


- 6) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>
- 7) Disconnect the immobilizer antenna connector (A) and ignition switch lighting connector (B).

- 8) Loosen the screw and release the lock (D) at opposite side using flat tip screwdriver (1), and then detach the immobilizer antenna (C).

CAUTION:

Do not apply excessive force to remove the immobilizer antenna and lock. Otherwise they may be broken because those parts are the products made of a plastic.

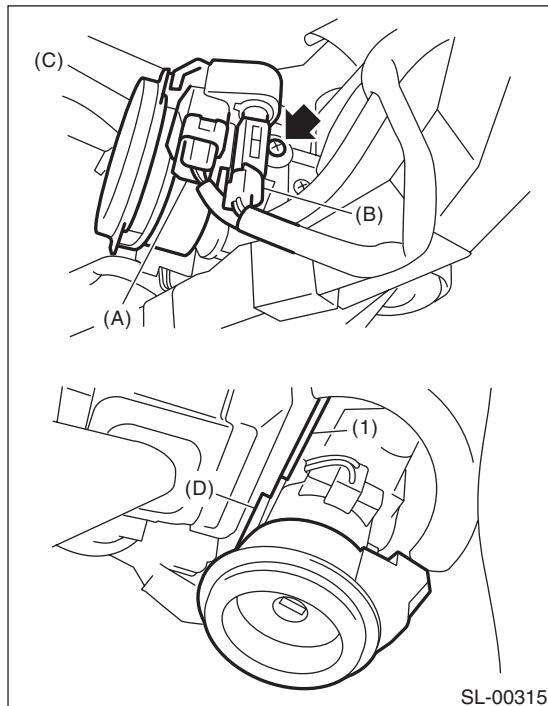

B: INSTALLATION

Install each part in the reverse order of removal.

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

SR

	Page
1. General Description	2
2. Sunroof Control System	4
3. Glass Lid	5
4. Sunroof Assembly	6
5. Sunroof Motor	7
6. Sunroof Switch	8
7. Sunshade	9