


Front Door Latch and Door Lock Actuator Assembly

SECURITY AND LOCKS

7. Front Door Latch and Door Lock Actuator Assembly


A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Disconnect the ground cable from battery.
- 3) Remove the front door trim. <Ref. to EI-45, REMOVAL, Door Trim.>
- 4) Remove the sealing cover. <Ref. to EB-21, REMOVAL, Front Sealing Cover.>
- 5) Remove the glass run rubber (A) partially.

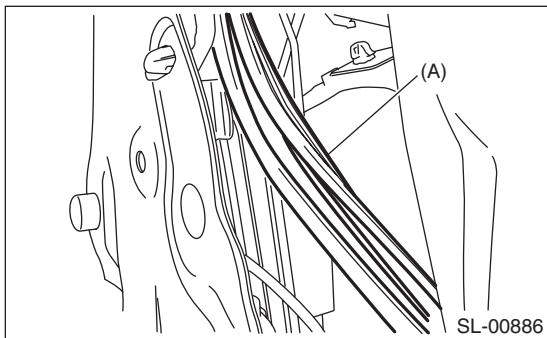

SL-00886

- 6) Remove the bolts, and then remove the door sash.
- 7) Remove the rod from the outer handle rod clamp.
- 8) Disconnect the door lock actuator connector.
- 9) Remove the screws, and remove the front door latch & door lock actuator assembly.

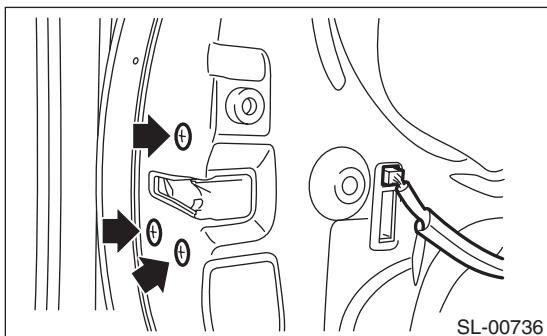

SL-00736

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION


1. DOOR LATCH

Check if the front door latch operates normally.

- If the cable or rod is faulty, replace the front door latch and door lock actuator assembly.

2. LOCK ACTUATOR

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

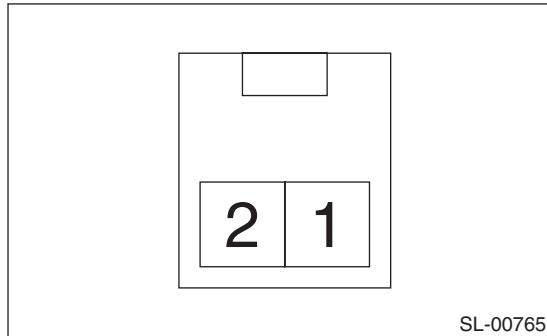

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	—	+
Unlock → Lock	+	—

- 3) If the actuator does not operate normally, replace the front door latch and door lock actuator assembly.