

8. Rear Inner Remote

A: REMOVAL

Refer to “Front Inner Remote” for the removal procedure. <Ref. to SL-30, REMOVAL, Front Inner Remote.>

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Check if the rear remote handle operates normally.

- If the lever is faulty, replace the rear inner remote handle.
- If the cable is deformed, replace the rear door latch and door lock actuator assembly.