



### 9. Rear Outer Handle

#### A: REMOVAL

- 1) Raise the rear door glass to the top position.
- 2) Remove the rear door trim. <Ref. to EI-45, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-24, REMOVAL, Rear Sealing Cover.>
- 4) Remove the screws, and move aside the rear door latch and door lock actuator assembly.

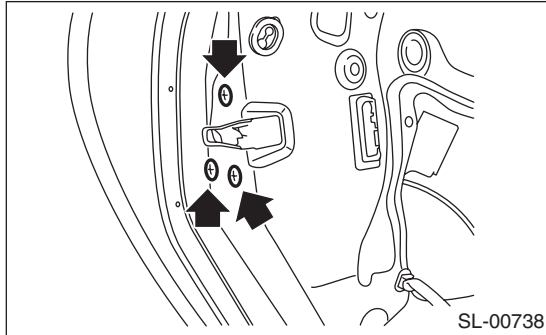

- 5) Remove the child protector cover, and loosen the TORX® bolt.

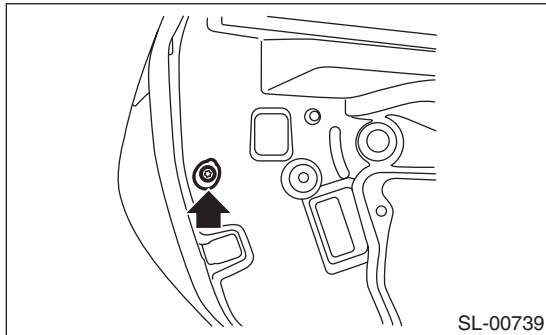


- 6) Remove the outer handle cover.
- 7) Move the rear outer handle towards the rear, and remove the rear outer handle.

#### CAUTION:

**Do not apply excessive force to remove the handle from the door panel. The door panel may become deformed.**

- 8) Remove the outer spacer, and remove the frame assembly from the inner side.
- 9) Remove the TORX® bolt.

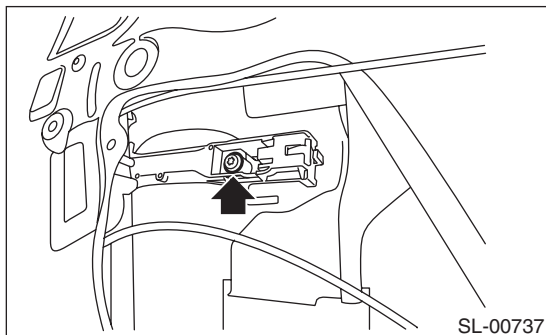

- 10) Remove the frame assembly from inside the door panel.

#### B: INSTALLATION

Install each part in the reverse order of removal.

#### Tightening torque:

**Refer to “COMPONENT” of “General Description”. <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>**

#### C: INSPECTION

Check if the rear outer handle operates normally.

- If the lever is faulty, replace the rear outer handle.
- If the rod is deformed, replace the rear door latch and door lock actuator assembly.