


3. Glass Lid

A: REMOVAL

- 1) Open the sunshade.
- 2) Remove the TORX® bolt, and then remove the glass lid carefully.

CAUTION:

- The thread locker is applied to the TORX® bolts, so use the new parts once they are removed.
- Be careful not to damage the glass lid.

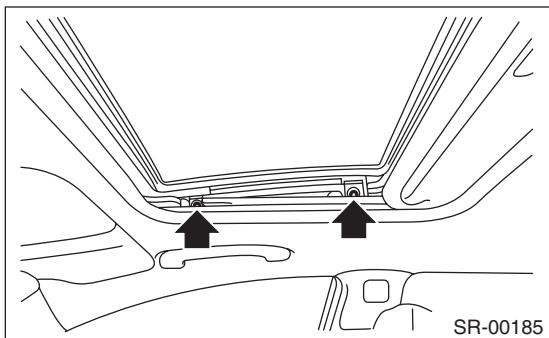

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SR-2, COMPONENT, General Description.>

C: ADJUSTMENT

- 1) Open the sunshade.
- 2) Loosen the glass lid mounting TORX® bolts (A), and then adjust the height by moving the lid side.

Difference in height between glass lid and roof panel L:

$0.75 \pm 1.0 \text{ mm (0.03} \pm 0.04 \text{ in)}$

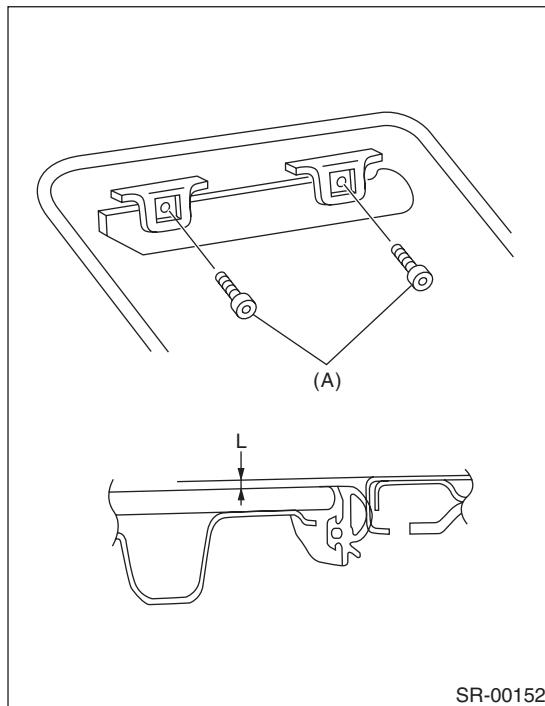

D: FORCED DRIVE

CAUTION:

After a forced operation, make sure to perform an initialize operation. <Ref. to SR-4, INSPECTION, Sunroof Control System.>

NOTE:

If the glass lid does not operate or is not supplied with power, move the glass lid using the hexagon wrench.

- 1) Remove the spot map light. <Ref. to LI-33, REMOVAL, Spot Map Light.>
- 2) Insert the hexagon wrench securely until it touches the motor shaft end.
- 3) Turn the hexagon wrench, and move the glass lid.
 - Turning right, the glass lid open.
 - Turning left, the glass lid close.

