

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


4. Sunroof Assembly

A: REMOVAL


CAUTION:

When removing the clip, use great care not to damage the roof trim.

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof trim. <Ref. to EI-66, REMOVAL, Roof Trim.>
- 3) Disconnect the harness connector of sunroof motor.
- 4) Remove the glass lid. <Ref. to SR-5, REMOVAL, Glass Lid.>
- 5) Remove the four drain tubes from frame assembly.
- 6) Remove the assist rail bracket (front) (A) and assist rail bracket (rear) (B).

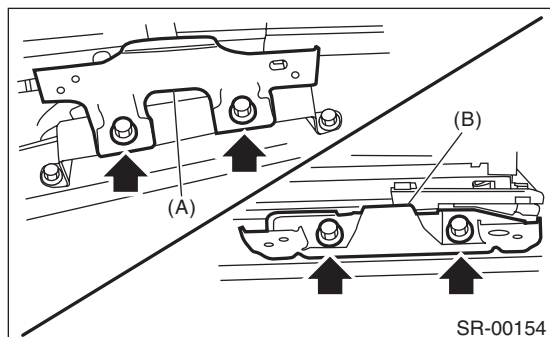

- 7) Remove the curtain airbag module. (model with curtain airbag module) <Ref. to AB-19, REMOVAL, Curtain Airbag Module.>
- 8) Remove the bolts and nuts and remove the frame assembly.

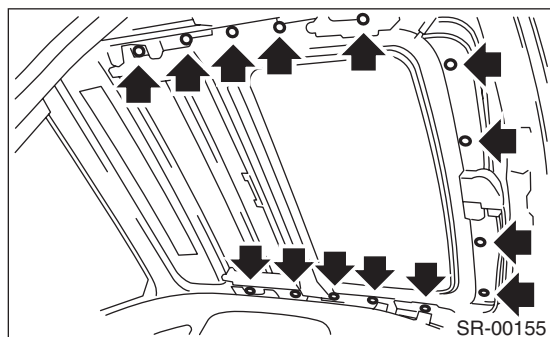

B: INSTALLATION

CAUTION:

Be careful not to snag the harness.

Install each part in the reverse order of removal.

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SR-2, COMPONENT, General Description.>

NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube, insert it securely into drain pipe.

Length A:

15 mm (0.59 in) or more

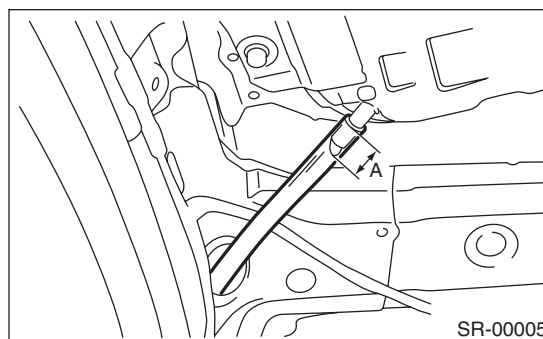

C: DISASSEMBLY

- 1) Remove the sunroof motor. <Ref. to SR-7, REMOVAL, Sunroof Motor.>
- 2) Remove the sunshade. <Ref. to SR-9, REMOVAL, Sunshade.>

D: ASSEMBLY

Assemble each part in the reverse order of disassembly.