



Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


6. Sunroof Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and screws (B) of the spot map light.

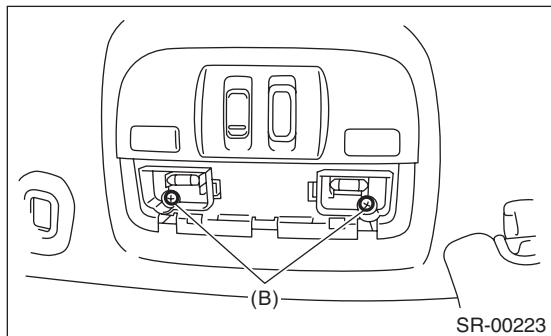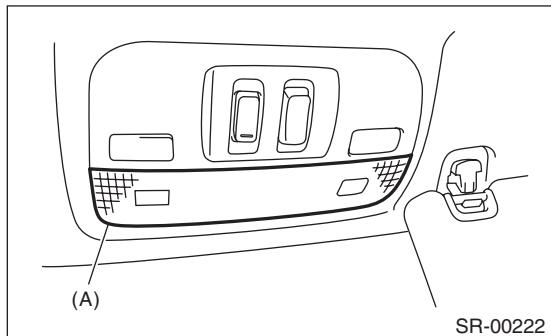

- 3) Disconnect the harness connectors and remove the spot map light.
- 4) Remove the screws and remove the sunroof switch bracket from the spot map light.

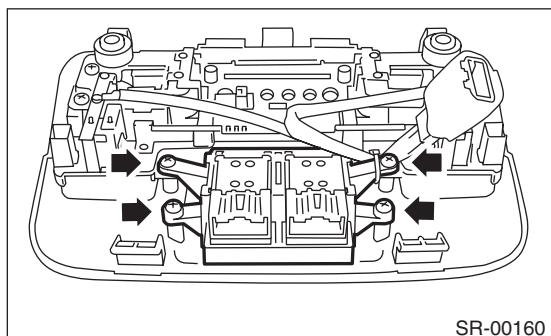

- 5) Remove the sunroof switch from the bracket.

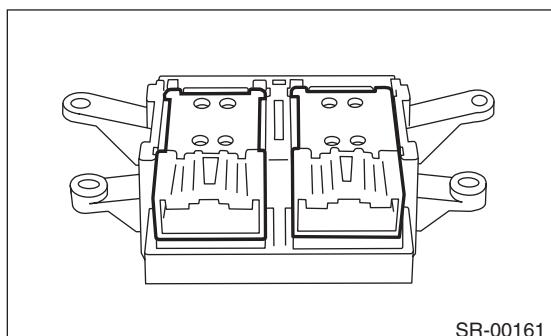


B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Remove the spot map light. <Ref. to LI-33, REMOVAL, Spot Map Light.>
- 2) Check the resistance between sunroof switch terminals.

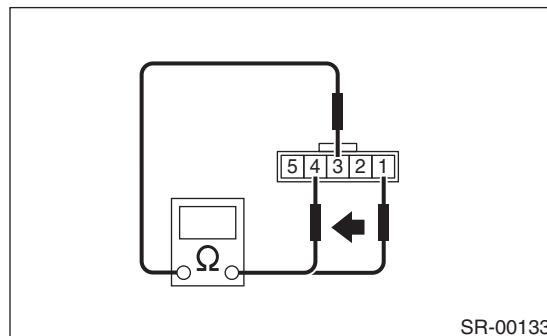

Switch position	Terminal No.	Standard	Connector No.
Open	1 and 3	Less than 1 Ω	R128
Close	3 and 4	Less than 1 Ω	
Tilt up	1 and 3	less than 1 Ω	R187
Tilt down	3 and 4	Less than 1 Ω	

- 3) Replace the sunroof switch if the inspection result is not within the standard value.

NOTE:

If the glass lid does not operate or is not supplied with power, move the glass lid using the hexagon wrench. <Ref. to SR-5, FORCED DRIVE, Glass Lid.>