


7. Sunshade

A: REMOVAL


- 1) Remove the sunroof assembly. <Ref. to SR-6, REMOVAL, Sunroof Assembly.>
- 2) Remove the screws, and remove the drip rail.

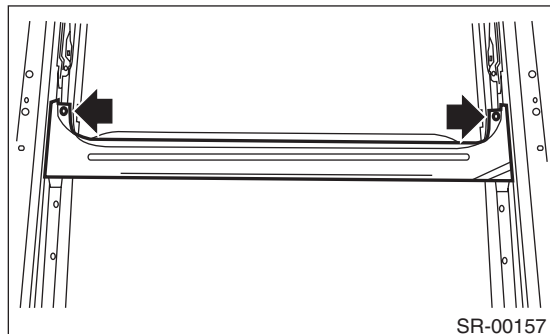

- 3) Remove the sunshade.

CAUTION:

Being careful not to damage the shade knob, pull out it while bending the sunshade.

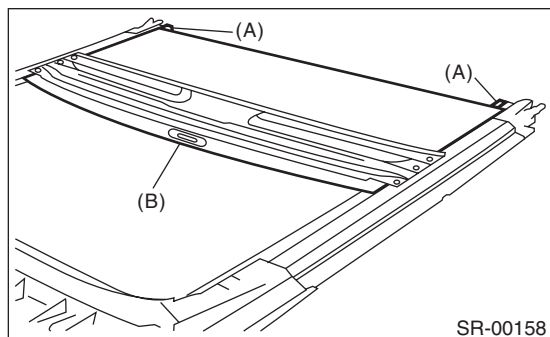

- (1) Remove the shade stopper (A).
- (2) Pull out the sunshade (B) from the frame assembly.


B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.

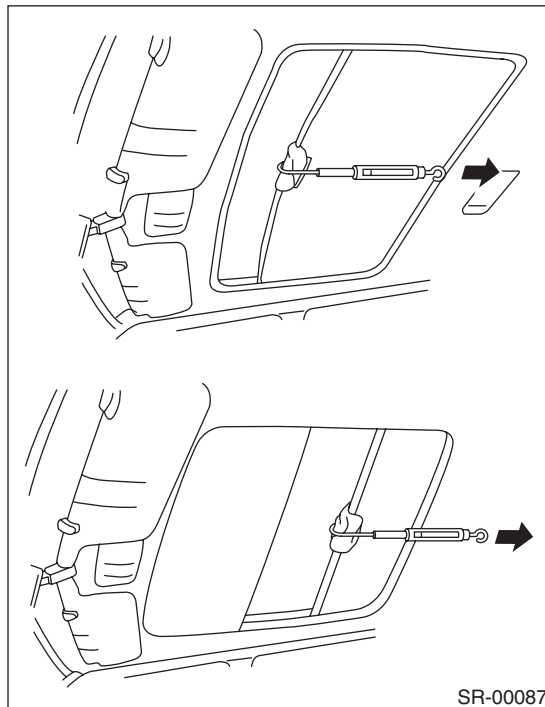

- 2) Pull the spring scale to measure moving load of the sunshade.

Moving load of sunshade:

Standard value

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	26
3. Front Hood Grille	27
4. Front Under Cover	28
5. Fuel Tank Protector	29
6. Mud Guard	30
7. Front Bumper	31
8. Rear Bumper	38
9. Cowl Panel	40
10. Roof Spoiler	41
11. Rear Spoiler	42
12. Side Sill Spoiler	43
13. Roof Molding	44
14. Door Trim	45
15. Instrument Panel Lower Cover	49
16. Glove Box	50
17. Console Box	51
18. Center Console	52
19. Instrument Panel Assembly	55
20. Lower Inner Trim	57
21. Upper Inner Trim	59
22. Rear Quarter Trim	60
23. Rear Shelf Trim	62
24. Trunk Room Trim	63
25. Sun Visor	64
26. Assist Grip	65
27. Roof Trim	66
28. Rear Gate Trim	69
29. Floor Mat	71
30. Rear Gate Garnish	72
31. Trunk Lid Garnish	73
32. Heat Shield Cover	74
33. Ornament	75