


## 10. Rear Wiper Motor

### A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear wiper arm. <Ref. to WW-20, REMOVAL, Rear Wiper Arm.>
- 3) Remove the rear gate lower trim. <Ref. to EI-69, REMOVAL, Rear Gate Trim.>
- 4) Disconnect the harness connector of wiper motor assembly.
- 5) Remove the bolt, and then remove the wiper motor assembly.

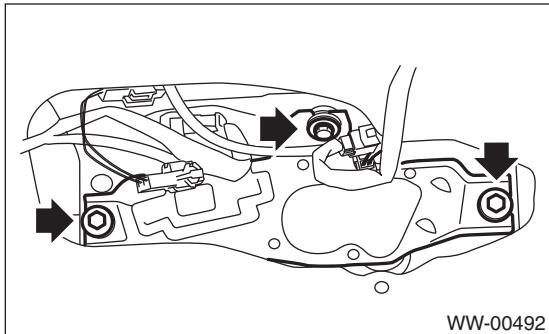

WW-00492

### B: INSTALLATION

- 1) Install each part in the reverse order of removal.
- 2) Make sure that the pivot cap with the round mark facing up, as shown in the figure.

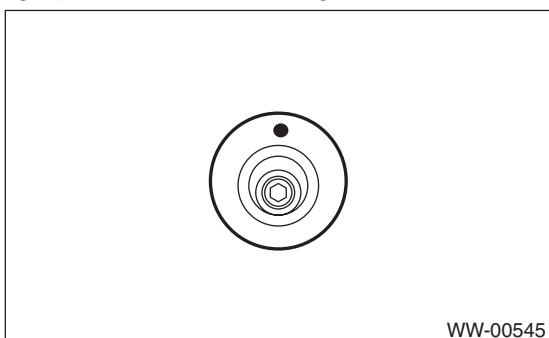


WW-00545

#### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to WW-3, REAR WIPER, COMPONENT, General Description.>


### C: INSPECTION

- 1) Connect the battery to the wiper motor connector and confirm that wiper motor operates.

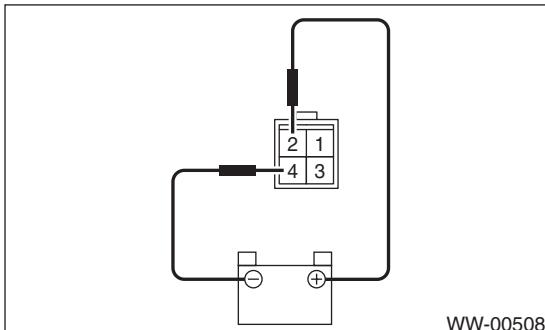


WW-00508

- 2) Connect the battery to terminals of the connector, and remove the terminal connection with motor rotating, and stop the wiper motor in mid-operation.

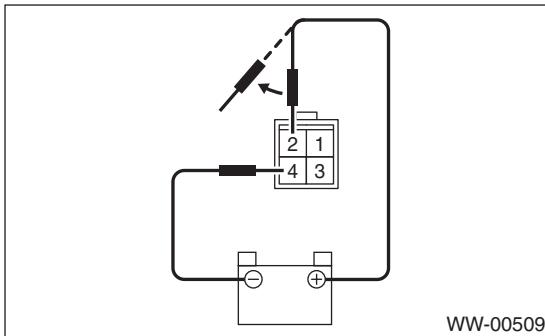

WW-00509

- 3) Connect the battery and confirm that the motor stops at the automatic stop position after the motor operates at low speed again.

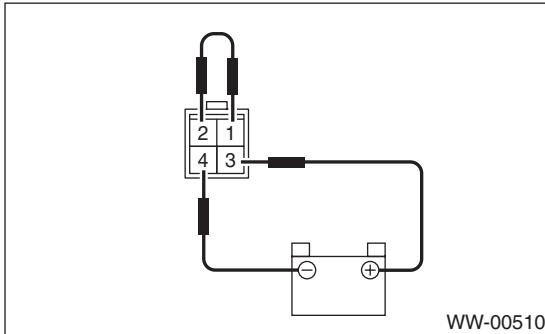

WW-00510