


Washer Tank and Motor

WIPER AND WASHER SYSTEMS


5. Washer Tank and Motor

A: REMOVAL


- 1) Open the front hood.
- 2) Disconnect the ground cable from battery.
- 3) Remove the front bumper face. <Ref. to EI-31, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the duct clip.

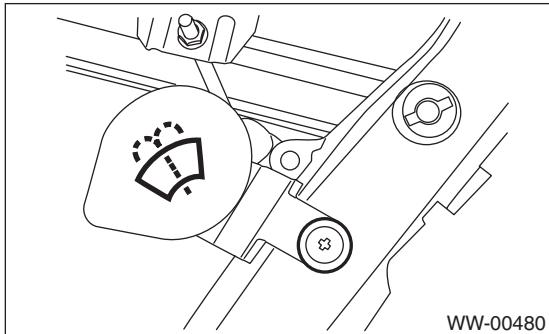


- 5) Disconnect the connector.

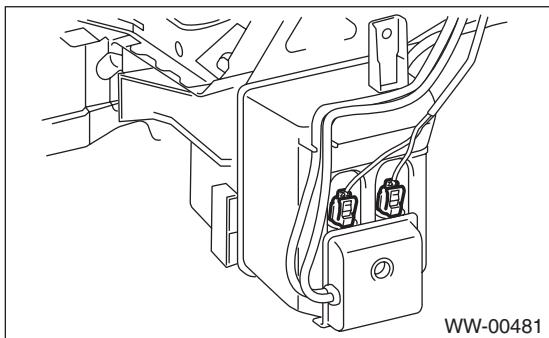


- 6) Remove the screws and detach the cover.

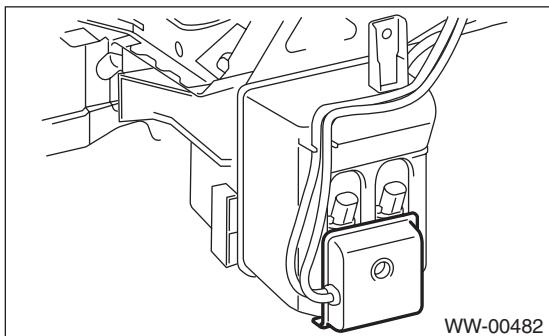

- 7) Prepare a container before disconnecting the washer hose and drain all washer fluid in the washer tank.

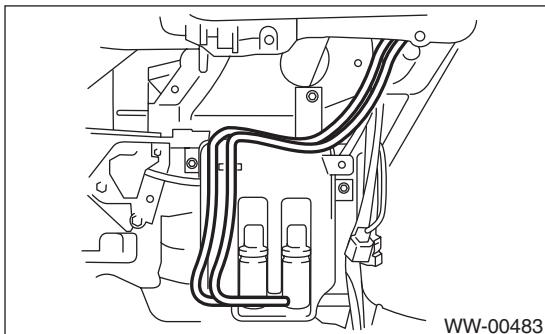

- 8) Remove the bolts and nuts and remove the washer tank.

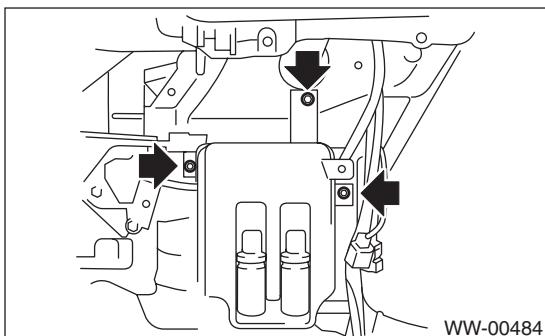

B: INSTALLATION


Install each part in the reverse order of removal.

Tightening torque:

6.0 N·m (0.61 kgf·m, 4.4 ft-lb)

C: DISASSEMBLY

Pull out the washer motor from the tank.

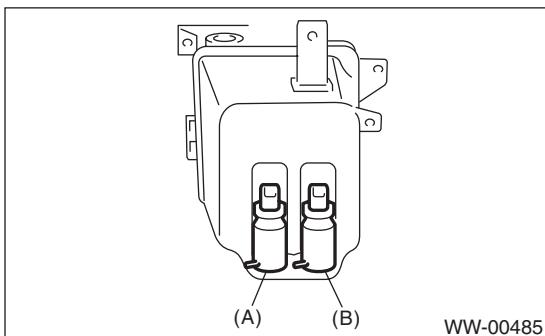

(A) Front
(B) Rear

D: ASSEMBLY

- 1) Assemble each part in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

