


14. Brake Pedal

A: REMOVAL


- 1) Remove the steering column. <Ref. to PS-16, REMOVAL, Steering Column.>
- 2) Disconnect the connector from the clutch switch.
- 3) Disconnect the connector from stop light switch.
- 4) Remove the stop light switch. <Ref. to BR-49, REMOVAL, Stop Light Switch.>
- 5) Remove the clevis pin which secures the pedal and operating rod.

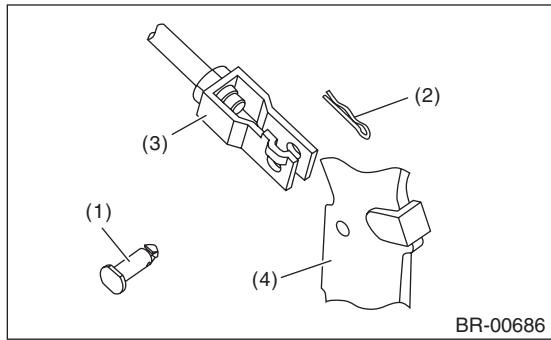

BR-00686

- (1) Clevis pin
- (2) Snap pin
- (3) Operating rod
- (4) Brake pedal

- 6) Remove the nut which secures the clutch master cylinder.
- 7) Remove the bolt and nut which secure the brake pedal bracket.

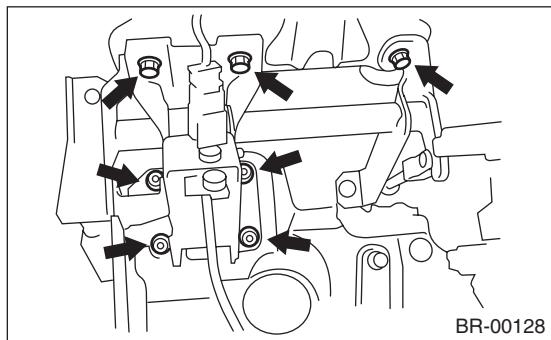

BR-00128

B: INSTALLATION

- 1) Install the bolt and nut which secure the brake pedal bracket.


Tightening torque:

18 N·m (1.84 kgf·m, 13.3 ft-lb)

- 2) Install clevis pin and snap pin which secure the operating rod to the brake pedal.

NOTE:

- Replace with a new clevis pin.
- Apply NIGTIGHT LYW No. 2 grease to the clevis pin.

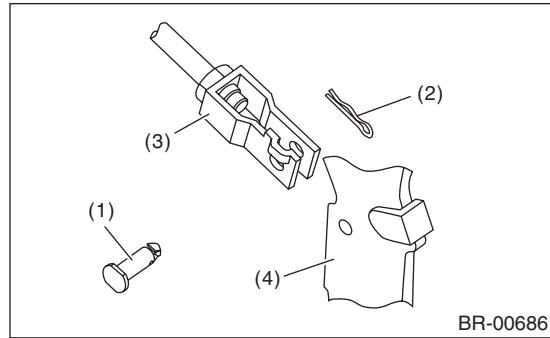

BR-00686

- (1) Clevis pin
- (2) Snap pin
- (3) Operating rod
- (4) Brake pedal

- 3) Install the stop light switch. <Ref. to BR-49, INSTALLATION, Stop Light Switch.>
- 4) Check the brake pedal after installation. <Ref. to BR-48, INSPECTION, Brake Pedal.>

BRAKE

C: INSPECTION

1) Move the brake pedal pads in a horizontal direction with a force of approx. 10 N (1 kgf, 2 lbf), and check that the pedal deflection is in the range of specifications.


CAUTION:

If excessive deflection is noted, replace with a new bushing.

Deflection of brake pedal:

Limit

5.0 mm (0.197 in) or less

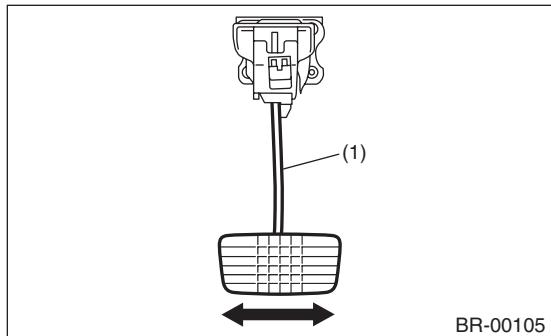

(1) Brake pedal


2) Check the position of the pedal pad.

Pedal height L:

150 — 160 mm (5.91 — 6.29 in)

Brake pedal free play A:

0.5 — 2 mm (0.020 — 0.079 in) [When pulling the brake pedal upward with a force of less than 10 N (1 kgf, 2 lbf).]

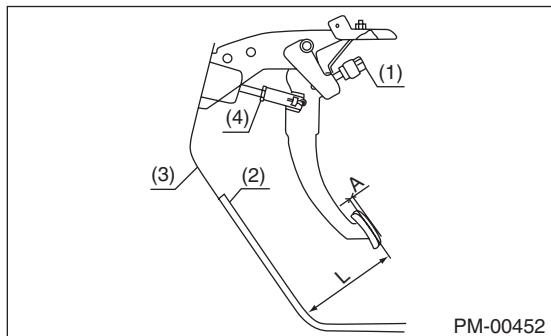

(1) Stop light switch

(2) Mat

(3) Toe board

(4) Brake booster operating rod

3) Adjust as follows, if the inspection result is not within the standard value.

(1) Remove the stop light switch. <Ref. to BR-49, REMOVAL, Stop Light Switch.>

(2) Loosen the lock nut of the brake booster operating rod, and rotate the rod to adjust the pedal height L to be within the standard value.

(3) Tighten the lock nut.

Tightening torque:

22 N·m (2.24 kgf-m, 16.2 ft-lb)

(4) Install the stop light switch. <Ref. to BR-49, INSTALLATION, Stop Light Switch.>