


## 3. Front Crossmember Support Plate

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the front under cover. <Ref. to EI-28, REMOVAL, Front Under Cover.>
- 3) Remove the bolt, and remove the front cross-member support plate.

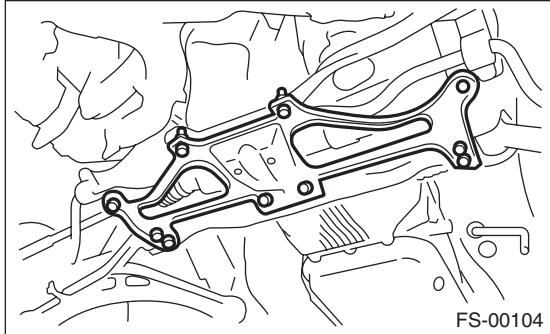

### B: INSTALLATION

Install each part in the reverse order of removal.

***Tightening torque:***

***60 N·m (6.1 kgf-m, 44.3 ft-lb)***