

## 6. Transfer Driven Gear

### A: NOTE

For removal, installation and inspection, refer to "6MT" or "5MT" section.

6MT model:

<Ref. to 6MT-55, Transfer Driven Gear.>

5MT model:

<Ref. to 5MT-43, Transfer Driven Gear.>