

7. Center Differential

A: NOTE

For removal, installation and inspection, refer to
“6MT” or “5MT” section.

6MT model:

<Ref. to 6MT-57, Center Differential.>

5MT model:

<Ref. to 5MT-45, Center Differential.>

DRIVE SHAFT SYSTEM

DS

	Page
1. General Description	2
2. Propeller Shaft	11
3. Front Axle	14
4. Front Hub Unit Bearing	18
5. Rear Axle	20
6. Rear Hub Unit Bearing	24
7. Front Drive Shaft	27
8. Rear Drive Shaft	35
9. General Diagnostic Table	43