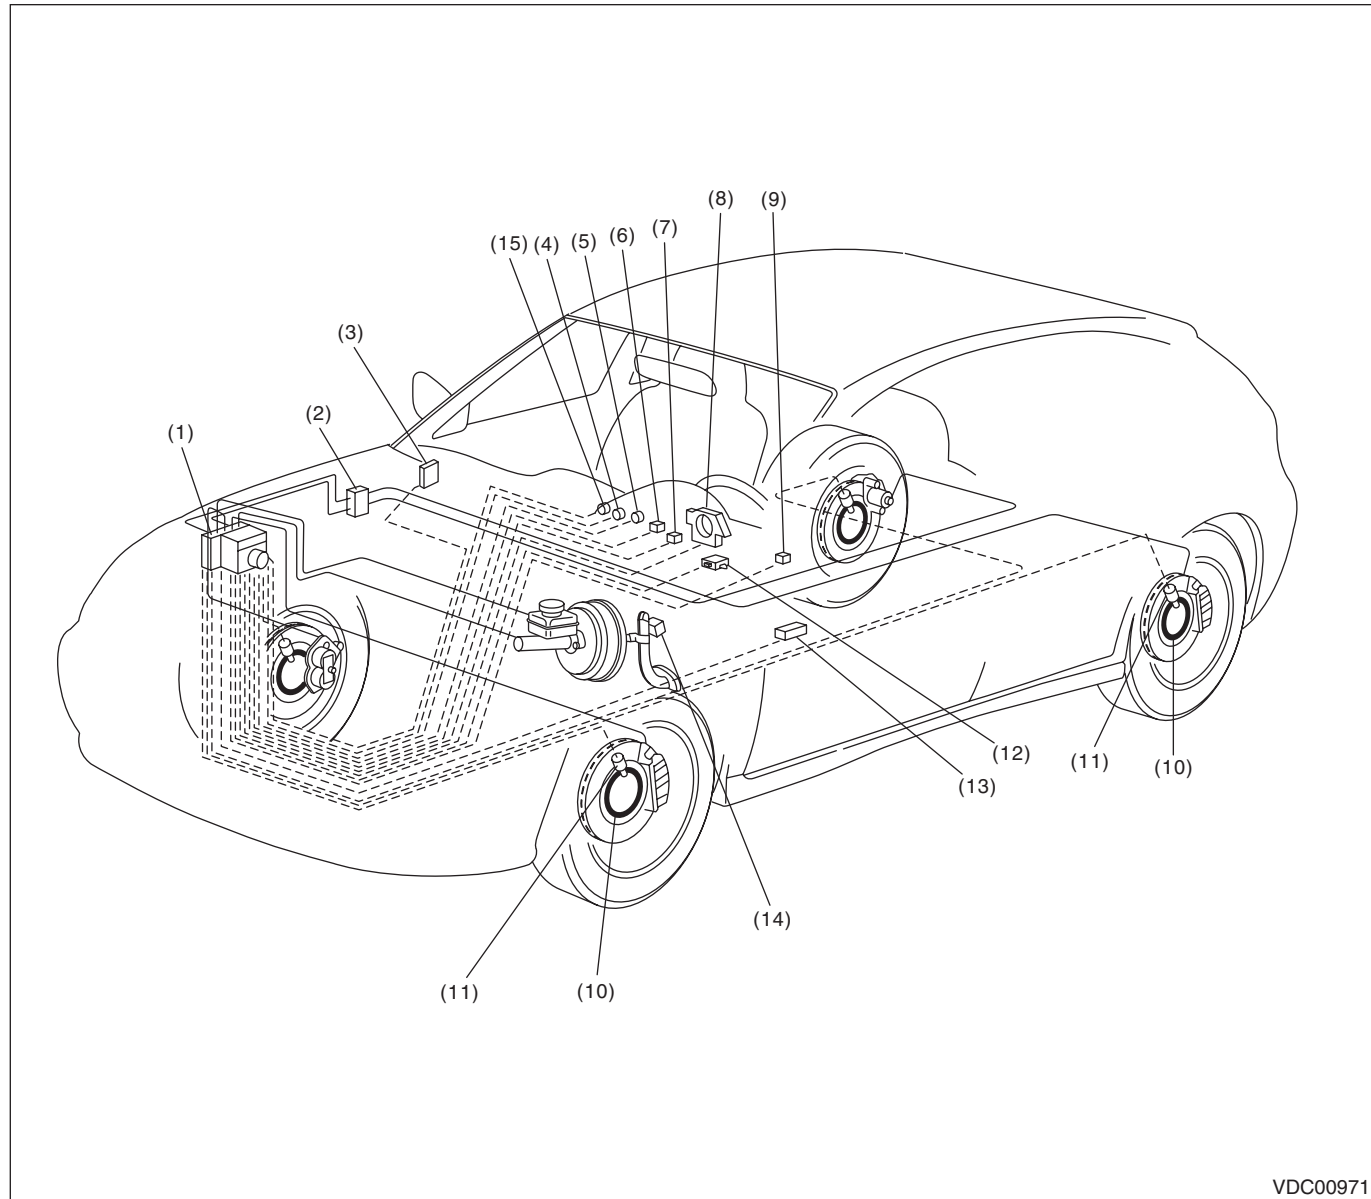


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

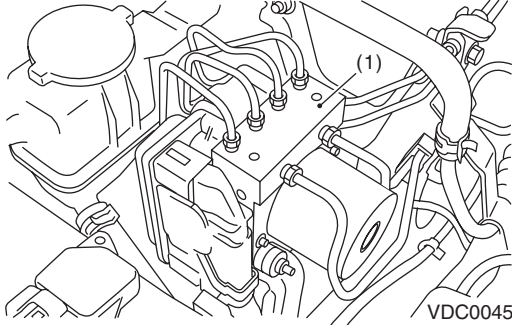
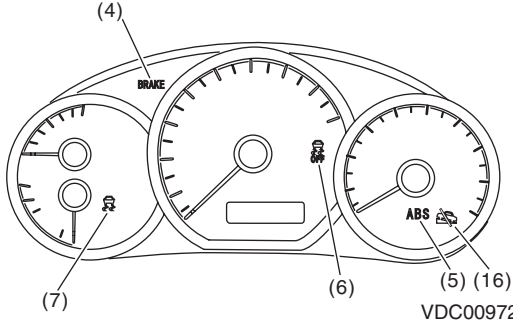
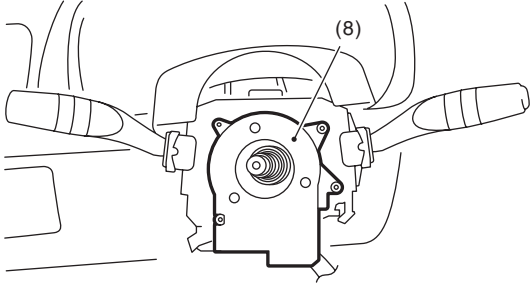
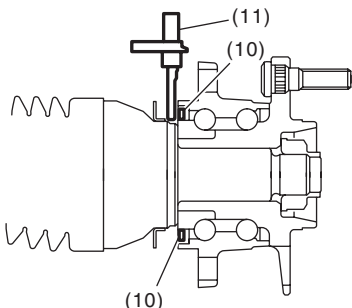
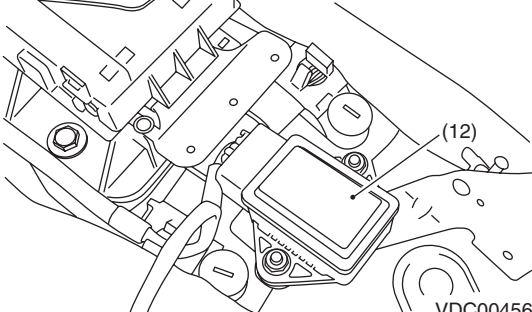
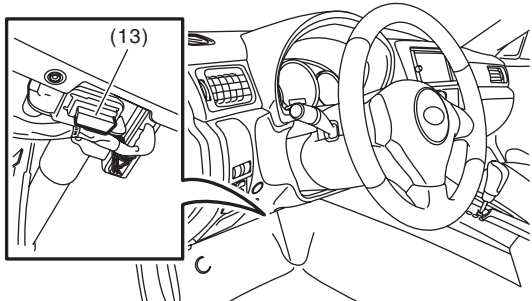


VDC00971

- | | | |
|---|--|--------------------------------------|
| (1) VDC control module and hydraulic control unit (VDCCM&H/U) | (6) VDC OFF & VDC traction mode indicator light (6MT model)
VDC OFF indicator light (5MT model) | (11) ABS wheel speed sensor |
| (2) Connector | (7) VDC warning light & VDC indicator light | (12) Yaw rate & G sensor |
| (3) Engine control module (ECM) | (8) Steering angle sensor | (13) Data link connector |
| (4) Brake warning light (EBD warning light) | (9) VDC OFF switch | (14) Stop light and brake switch |
| (5) ABS warning light | (10) Magnetic encoder | (15) Hill start assist warning light |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

 VDC00455	 VDC00972
 VDC00544	 VDC00234
 VDC00456	 VDC00545