


12.VDC OFF Switch

A: REMOVAL

1) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>

2) Remove the screws, and then remove the VDC OFF switch.

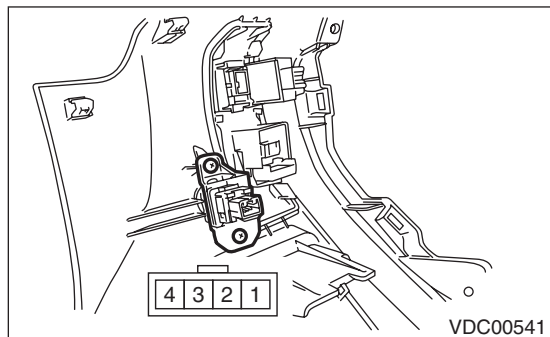

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1) Check the resistance between the VDC OFF switch terminals.

Switch position	Terminal No.	Standard
OFF	2 — 3	1 M Ω or more
ON	2 — 3	Less than 1 Ω

2) Replace the VDC OFF switch if the inspection result is not within the standard value.

VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	10
4. Electrical Component Location	12
5. Control Module I/O Signal	14
6. Subaru Select Monitor	18
7. Read Diagnostic Trouble Code (DTC)	25
8. Inspection Mode	26
9. Clear Memory Mode	27
10. Warning Light Illumination Pattern	28
11. List of Diagnostic Trouble Code (DTC)	48
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	53
13. General Diagnostic Table	110