


Rear ABS Wheel Speed Sensor

VEHICLE DYNAMICS CONTROL (VDC)


9. Rear ABS Wheel Speed Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the rear ABS wheel speed sensor.

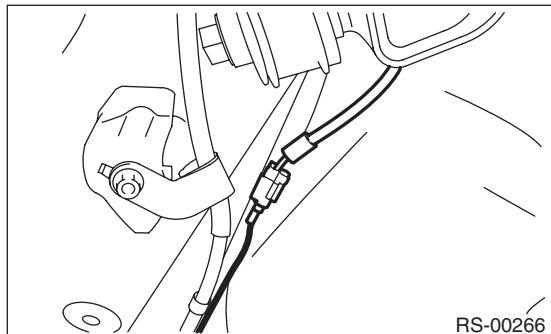

- 3) Remove the sensor harness clamp of the rear sub frame.

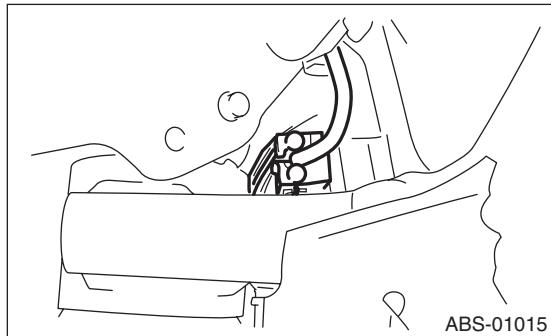


- 4) Remove the bolts and then remove the sensor harness bracket from the upper arm.

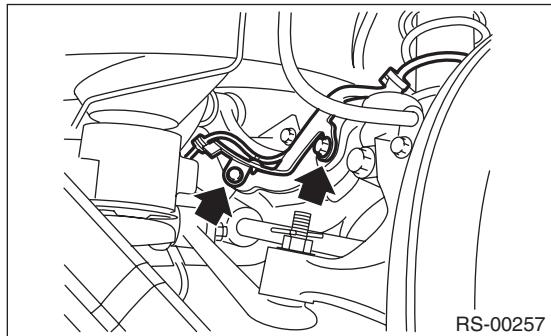

- 5) Remove the bolts, and remove the rear ABS wheel speed sensor from the rear axle.

CAUTION:

- Be careful not to damage the sensor.
- Do not apply excessive force to the sensor harness.

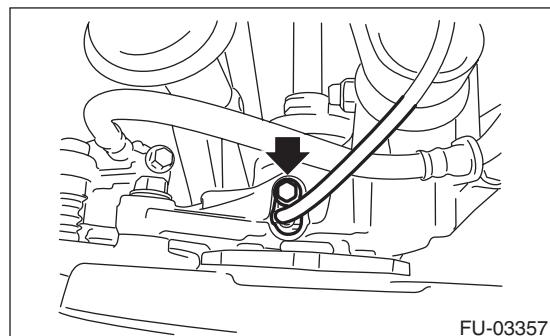

B: INSTALLATION

CAUTION:

Be careful not to damage the sensor.

Install each part in the reverse order of removal.

Tightening torque:

Sensor:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

Bracket:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

Check the identification (mark) on the harness to make sure there is no warpage. (RH: P5 (White), LH: P6 (Yellow))

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

Refer to "INSPECTION" in "Front ABS Wheel Speed Sensor". <Ref. to VDC-24, INSPECTION, Front ABS Wheel Speed Sensor.>