


Drain Separator

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


12.Drain Separator

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the rear differential. <Ref. to DI-22, REMOVAL, Rear Differential (T-type).>
- 3) Disconnect the drain hose from the connector.

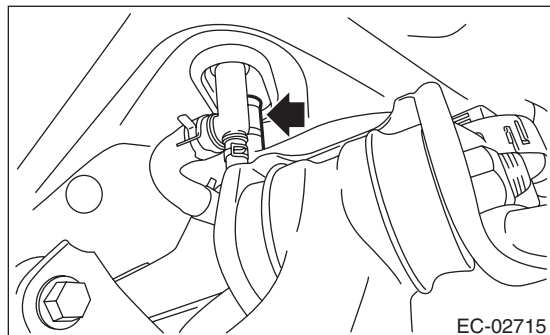

- 4) Remove the drain separator from the vehicle.

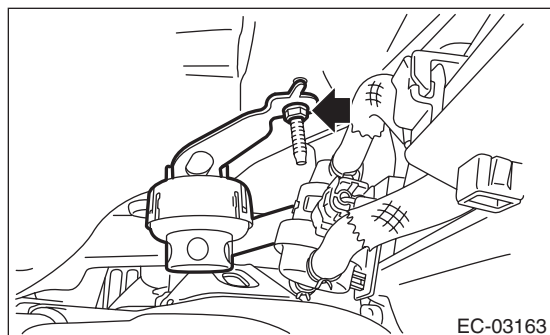

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:


7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

C: DISASSEMBLY

- 1) Remove the drain hose from the drain separator.

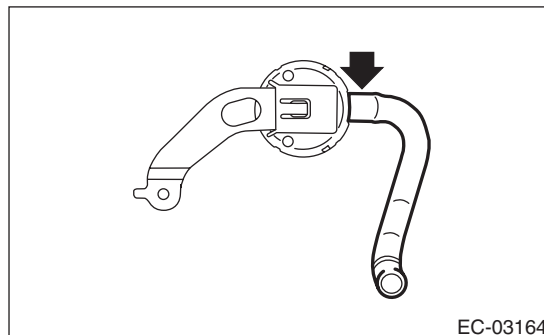

- 2) Lift up the claw (A) of the drain separator and slide the drain separator in the direction of the arrow to remove the drain separator.

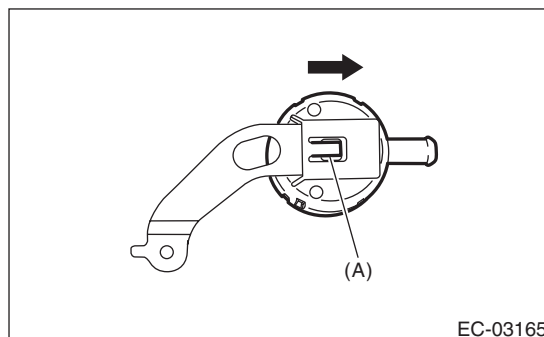

D: ASSEMBLY

Assemble in the reverse order of disassembly.

E: INSPECTION

- 1) Check that the drain separator and drain separator bracket have no deformation, crack, or other damage.
- 2) Check that the drain hose has no crack, damage, or looseness.
- 3) Check that no foreign substances are clogged in the drain separator.