

### 7. Fuel Sub Level Sensor

#### A: REMOVAL

For removal procedures, refer to the “FU(STI)” section. <Ref. to FU(STI)-83, REMOVAL, Fuel Sub Level Sensor.>

#### B: INSTALLATION

For installation procedures, refer to the “FU(STI)” section. <Ref. to FU(STI)-84, INSTALLATION, Fuel Sub Level Sensor.>

#### C: INSPECTION

For inspection procedures, refer to the “FU(STI)” section. <Ref. to FU(STI)-84, INSPECTION, Fuel Sub Level Sensor.>