


1. General Description

A: COMPONENT

1. FRONT EXHAUST PIPE

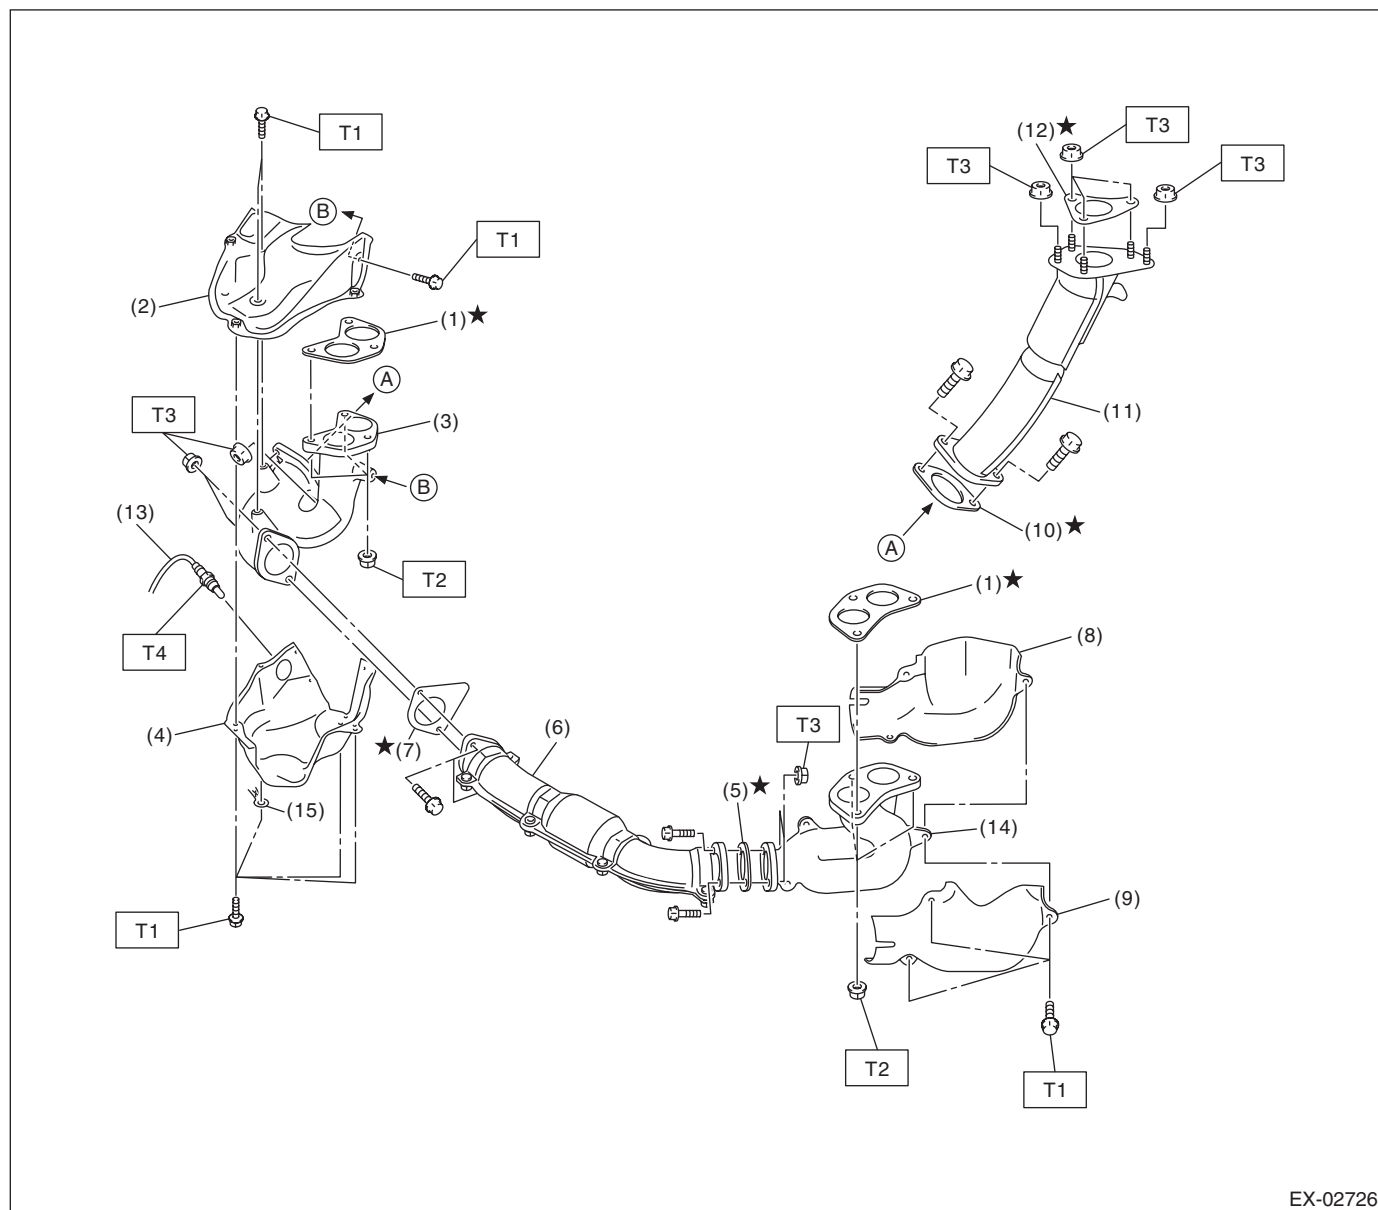

EX-02726

- | | | |
|-------------------------------------|-------------------------------------|-------------------|
| (1) Gasket | (8) Exhaust manifold LH inner cover | (15) Ground cable |
| (2) Exhaust manifold RH upper cover | (9) Exhaust manifold LH outer cover | |
| (3) Exhaust manifold RH | (10) Gasket | |
| (4) Exhaust manifold RH lower cover | (11) Joint pipe | |
| (5) Gasket | (12) Gasket | |
| (6) Front exhaust pipe | (13) Front oxygen (A/F) sensor | |
| (7) Gasket | (14) Exhaust manifold LH | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 19 (1.9, 14.0)


T2: 40 (4.1, 29.5)

T3: 42.5 (4.3, 31.3)

T4: <Ref. to FU(STI)-54, INSTALLATION, Front Oxygen (A/F) Sensor.> <Ref. to FU(w/o STI)-53, INSTALLATION, Front Oxygen (A/F) Sensor.>

2. CENTER AND REAR EXHAUST PIPE, AND MUFFLER

- 4 door model

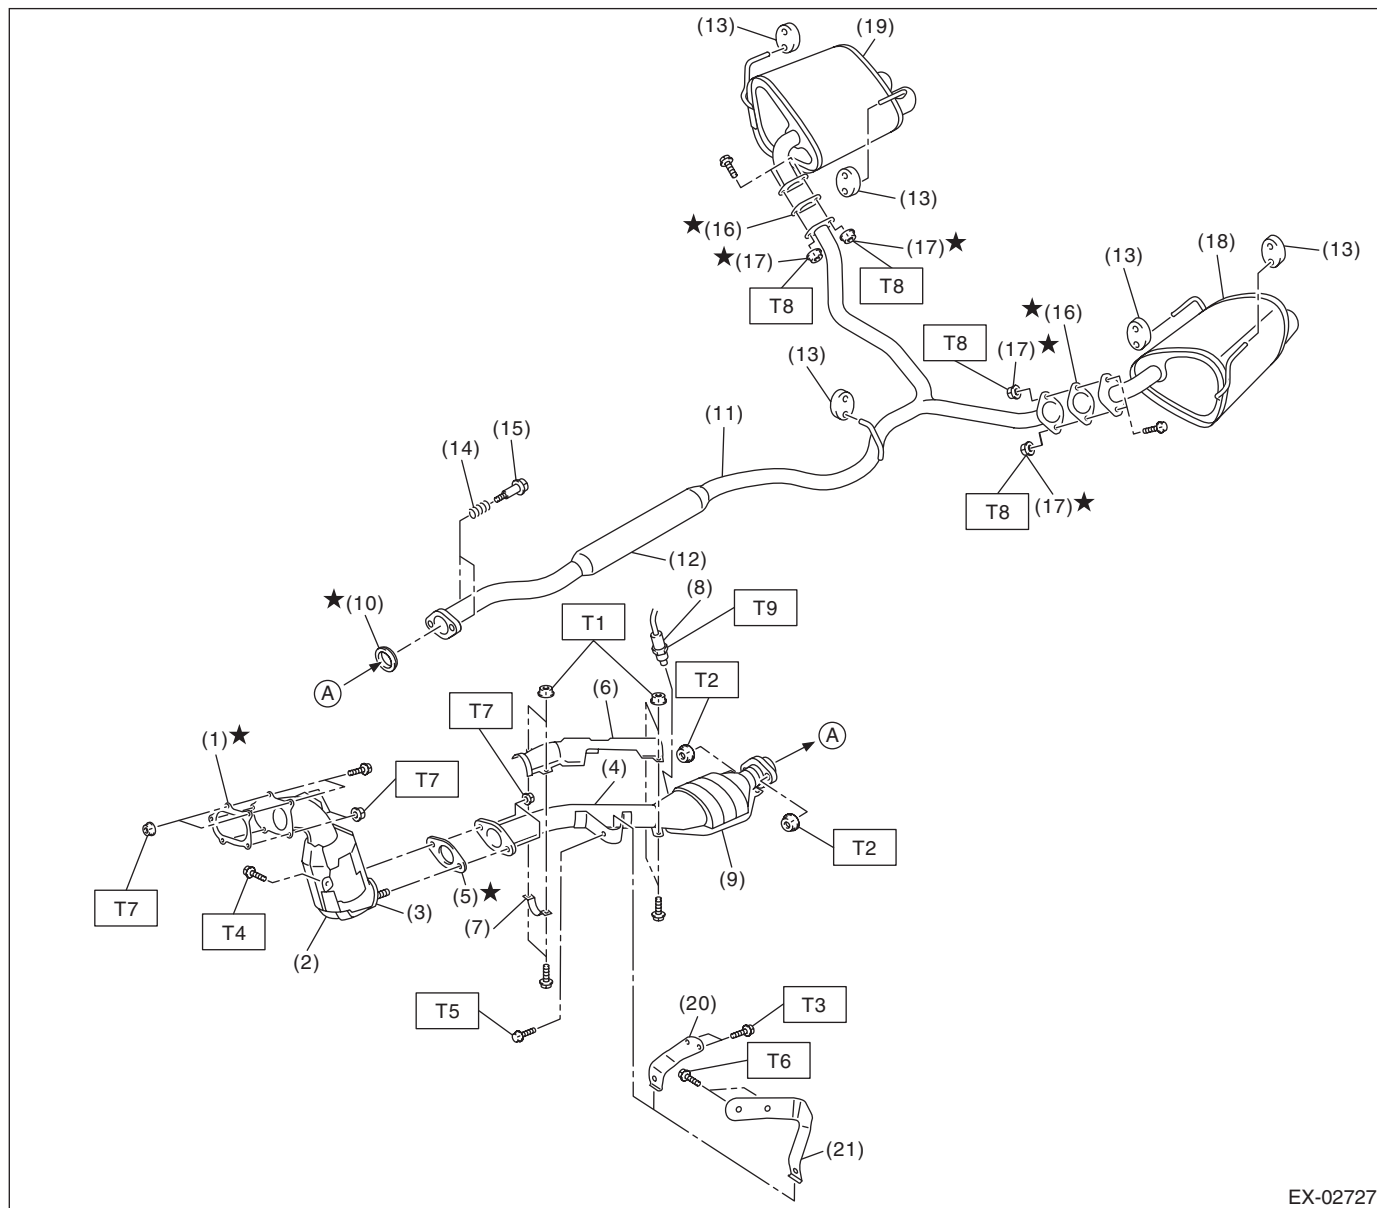

EX-02727

- | | |
|-------------------------------------|---------------------------------|
| (1) Gasket | (12) Chamber |
| (2) Front catalytic converter | (13) Cushion rubber |
| (3) Center exhaust pipe (front) | (14) Spring |
| (4) Center exhaust pipe (rear) | (15) Bolt |
| (5) Gasket | (16) Gasket |
| (6) Center exhaust pipe upper cover | (17) Self-locking nut |
| (7) Clamp | (18) Muffler LH |
| (8) Rear oxygen sensor | (19) Muffler RH |
| (9) Rear catalytic converter | (20) Hanger bracket (5MT model) |
| (10) Gasket | (21) Hanger bracket (6MT model) |

- | |
|------------------------|
| (11) Rear exhaust pipe |
|------------------------|


Tightening torque: N·m (kgf-m, ft-lb)

- | | |
|------------|--|
| T1: | 13 (1.3, 9.6) |
| T2: | 18 (1.8, 13.3) |
| T3: | 23 (2.3, 17.0) |
| T4: | 30 (3.1, 22.1) |
| T5: | 35 (3.6, 25.8) |
| T6: | 40 (4.1, 29.5) |
| T7: | 42.5 (4.3, 31.3) |
| T8: | 48 (4.9, 35.4) |
| T9: | <Ref. to FU(STI)-56, INSTALLATION, Rear Oxygen Sensor.>
<Ref. to FU(w/o STI)-55, INSTALLATION, Rear Oxygen Sensor.> |

General Description

EXHAUST

- 5 door model

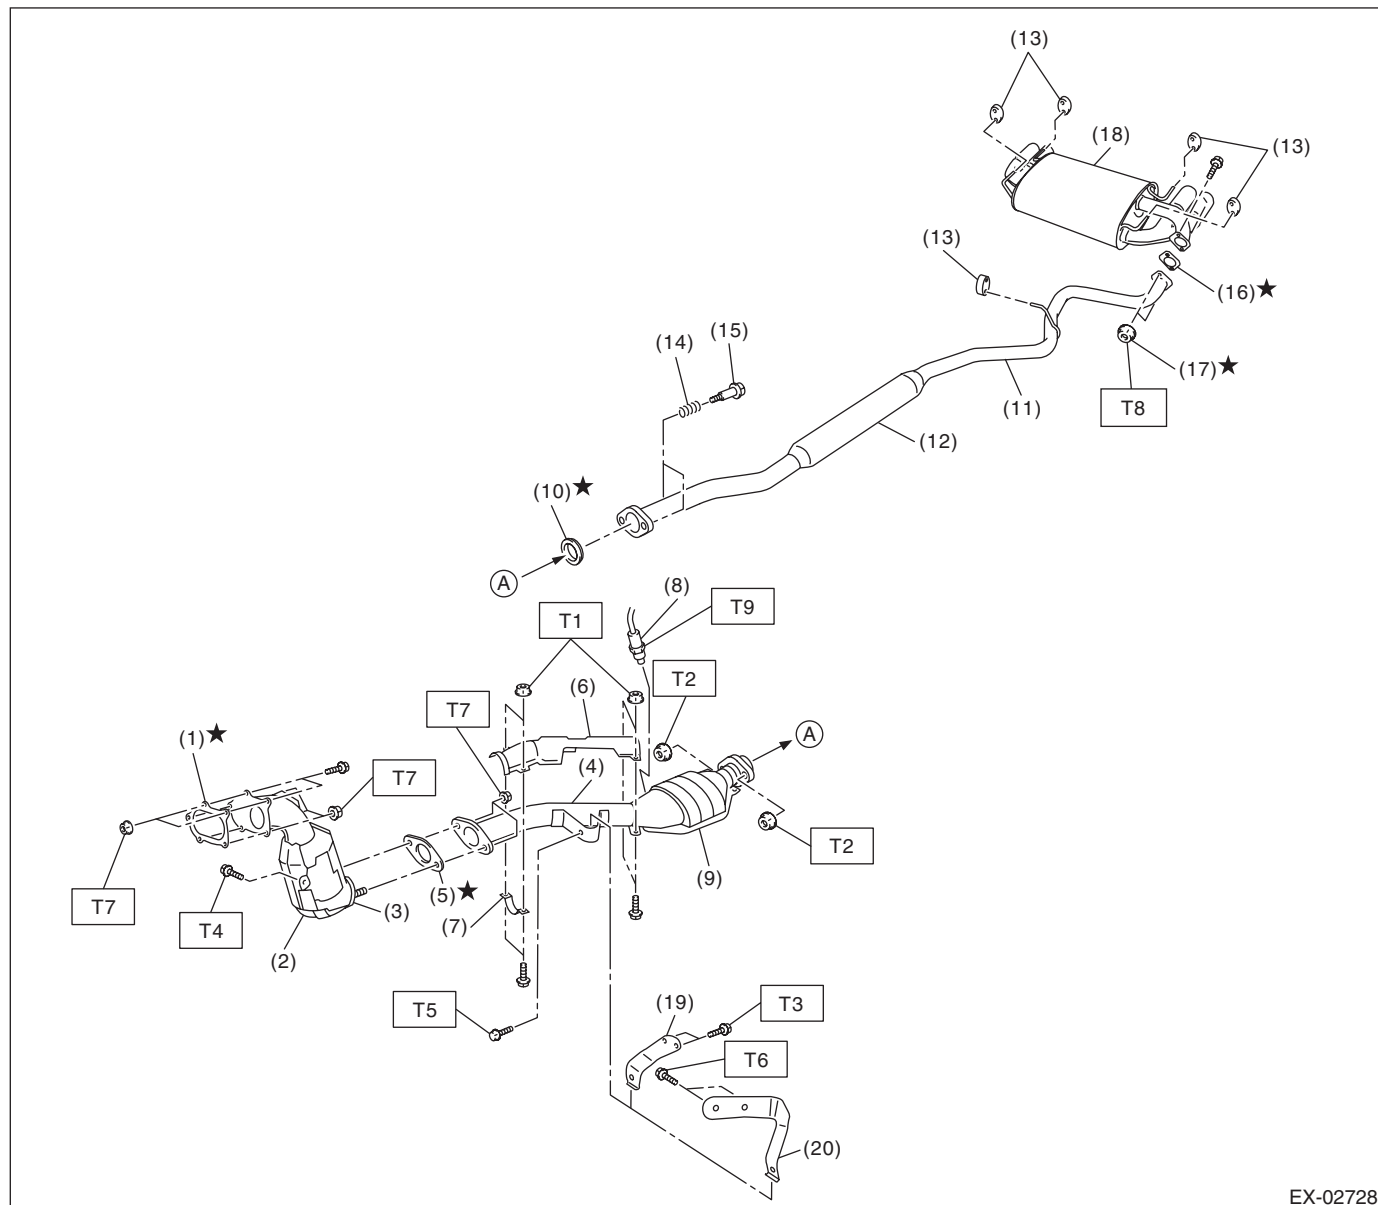

EX-02728

- | | |
|-------------------------------------|---------------------------------|
| (1) Gasket | (11) Rear exhaust pipe |
| (2) Front catalytic converter | (12) Chamber |
| (3) Center exhaust pipe (front) | (13) Cushion rubber |
| (4) Center exhaust pipe (rear) | (14) Spring |
| (5) Gasket | (15) Bolt |
| (6) Center exhaust pipe upper cover | (16) Gasket |
| (7) Clamp | (17) Self-locking nut |
| (8) Rear oxygen sensor | (18) Muffler |
| (9) Rear catalytic converter | (19) Hanger bracket (5MT model) |
| (10) Gasket | (20) Hanger bracket (6MT model) |

Tightening torque: N·m (kgf·m, ft·lb)

- T1: 13 (1.3, 9.6)**
T2: 18 (1.8, 13.3)
T3: 23 (2.3, 17.0)
T4: 30 (3.1, 22.1)
T5: 35 (3.6, 25.8)
T6: 40 (4.1, 29.5)
T7: 42.5 (4.3, 31.3)
T8: 48 (4.9, 35.4)
T9: <Ref. to FU(STI)-56, INSTALLATION, Rear Oxygen Sensor.>
<Ref. to FU(w/o STI)-55, INSTALLATION, Rear Oxygen Sensor.>

B: CAUTION

- Prior to starting work, pay special attention to the following:
 1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
 2. Protect the vehicle using a seat cover, fender cover, etc.
 3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.
- If any grease adheres to the exhaust pipe, wipe it off. Otherwise a fire may happen.