


SI-DRIVE (SUBARU Intelligent Drive) Selector

FUEL INJECTION (FUEL SYSTEMS)


18. SI-DRIVE (SUBARU Intelligent Drive) Selector

A: REMOVAL

- 1) Disconnect the ground cable from the battery.

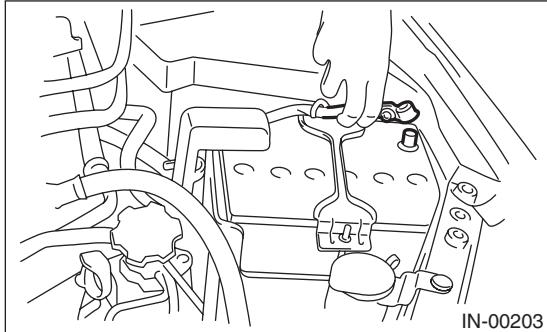

- 2) Remove the console box. <Ref. to EI-51, REMOVAL, Console Box.>
- 3) Remove the multi-selector switch connector from the console box.
- 4) Remove the screws and tabs holding the multi-selector switch to the console box and the multi-selector switch.

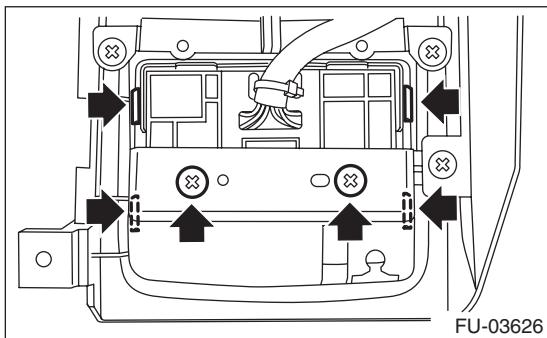

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

1.5 N·m (0.2 kgf-m, 1.1 ft-lb)

C: INSPECTION

- 1) Check that the multi select switch does not have deformation, cracks, or damage.
- 2) Check the resistance between the terminals at the SI-DRIVE selector.

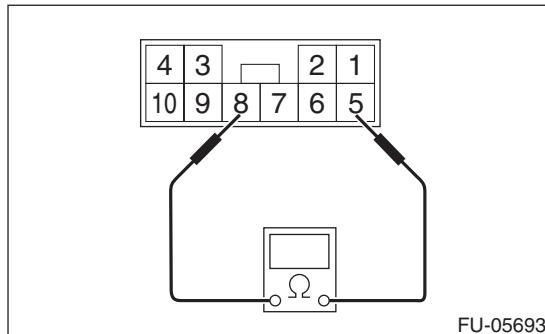

Switch position	Terminal No.	Standard
Sport (When turning the SI-DRIVE selector to the left)		Less than 1 Ω
Intelligent (When pressing the SI-DRIVE selector)	5 and 8	1±0.05 kΩ
Sport Sharp (When turning the SI-DRIVE selector to the right)		3.67±0.1835 kΩ