



21. Fuel Pump Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

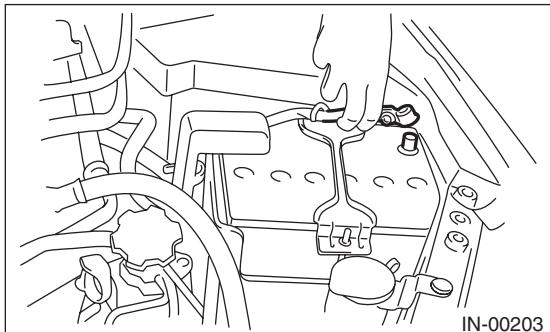

2) Remove the fuel pump relay from the relay block on the back side of the glove box.


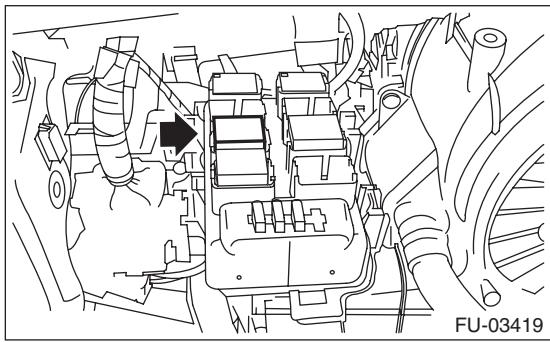


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the fuel pump relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel pump relay terminals.

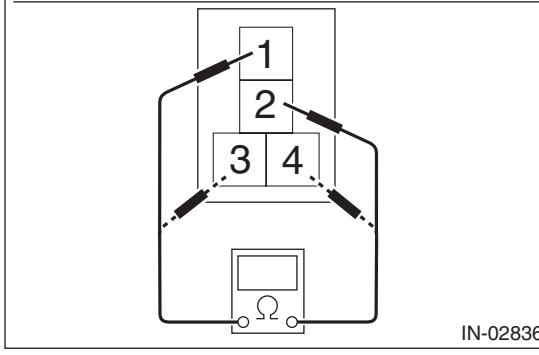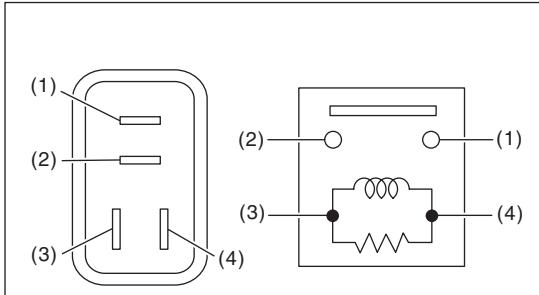


| Terminal No. | Standard |
|--------------|--------------------------------------|
| 1 and 2 | 1 MΩ or more |
| 3 and 4 | 93.8 — 136.4 Ω (when 20°C (68°F)) |

Fuel Pump Relay

FUEL INJECTION (FUEL SYSTEMS)

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the fuel pump relay terminals.

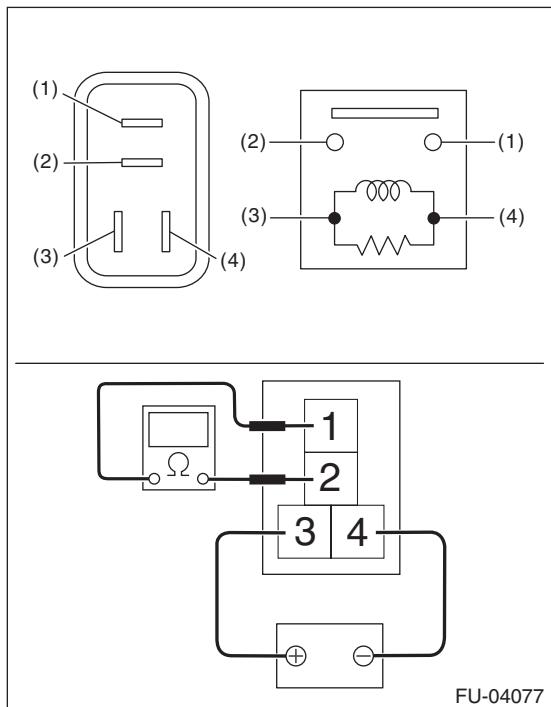

| Terminal No. | Standard |
|--------------|---------------|
| 1 and 2 | Less than 1 Ω |