

3. Ignition Coil

A: REMOVAL

Direct ignition type is adopted. Refer to “Spark Plug” for removal procedure. <Ref. to IG(STI)-4, REMOVAL, Spark Plug.>

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf-m, 11.8 ft-lb)

C: INSPECTION

For inspection procedure, refer to “Diagnostics for Engine Starting Failure”. <Ref. to EN(H4DOTC)(diag)-80, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

Ignition Coil

IGNITION

STARTING/CHARGING SYSTEMS

SC(STI)

	Page
1. General Description	2
2. Starter	8
3. Generator	21
4. Battery	27