


## 4. Air Intake Duct

### A: REMOVAL

Remove the clip which secures the air intake duct, and remove the air intake duct.

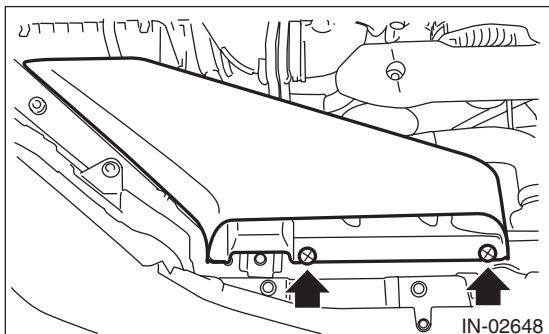

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check that the air intake duct has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake duct.