


### 5. Intake Duct

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.

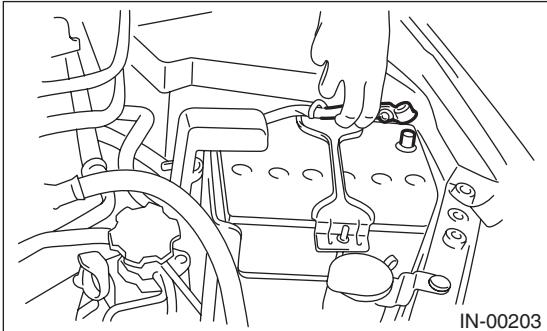

- 2) Remove the intake manifold. <Ref. to FU(STI)-17, REMOVAL, Intake Manifold.>
- 3) Remove the sensor, engine harness and fuel pipe from the intake manifold. <Ref. to FU(STI)-25, DISASSEMBLY, Intake Manifold.>
- 4) Remove the intake duct from intake manifold.



- 5) Remove the PCV hose assembly and air bypass hose from the intake duct.

#### B: INSTALLATION

Install in the reverse order of removal.

##### *Tightening torque:*

**17 N·m (1.7 kgf·m, 12.5 ft-lb)**

#### C: INSPECTION

Check that the intake duct has no deformation, cracks or other damages.