


Intercooler

INTAKE (INDUCTION)


6. Intercooler

A: REMOVAL

- 1) Remove the bolts holding the PCV pipe to the intercooler.

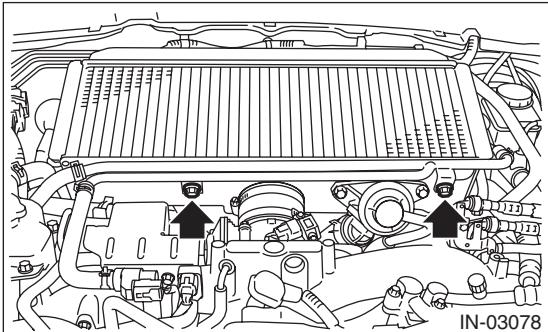



- 2) Loosen the clamp (A) holding the intake duct to the turbocharger.

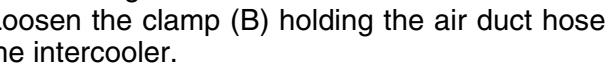


- 3) Loosen the clamp (B) holding the air duct hose to the intercooler.

- 4) Remove the bolts (C) securing the air by-pass valve to the intercooler, and disconnect the air by-pass valve.


- 5) Remove the bolts which secure the intercooler to the intercooler stay, and remove the intercooler.

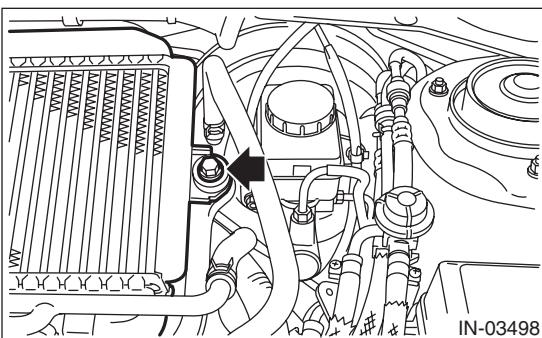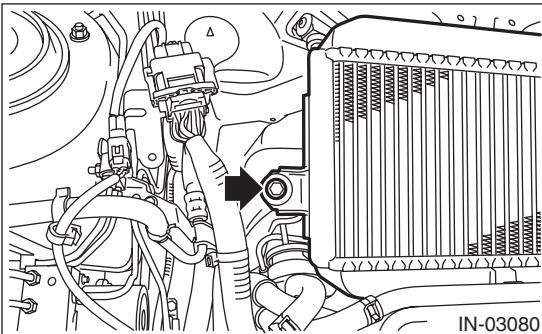


- 6) Remove the air duct hose from the throttle body.

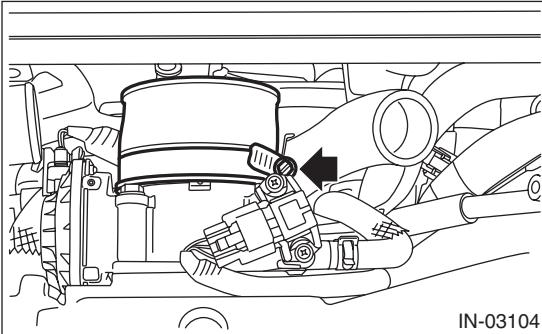

- 7) Remove clip (A) holding the engine harness to the intercooler stay RH, and remove the intercooler stay RH.

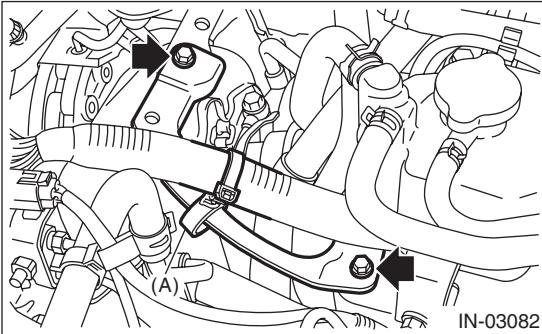

8) Remove the intercooler stay LH.

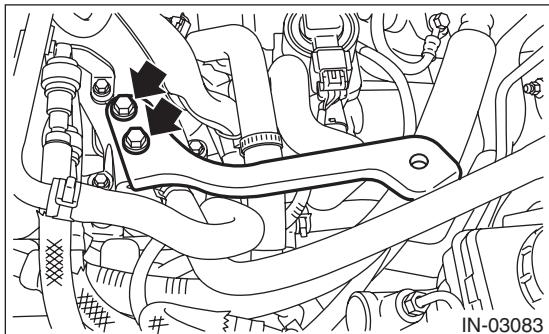


B: INSTALLATION

1) Install the intercooler stay LH.

Tightening torque:


16 N·m (1.6 kgf·m, 11.8 ft-lb)

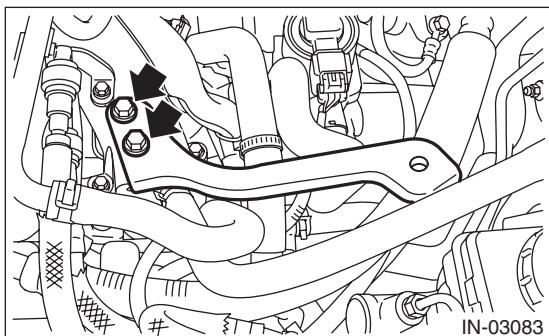

2) Install the intercooler stay RH, and install the clip (A) which secures the engine harness to the intercooler stay RH.

Tightening torque:


16 N·m (1.6 kgf·m, 11.8 ft-lb)

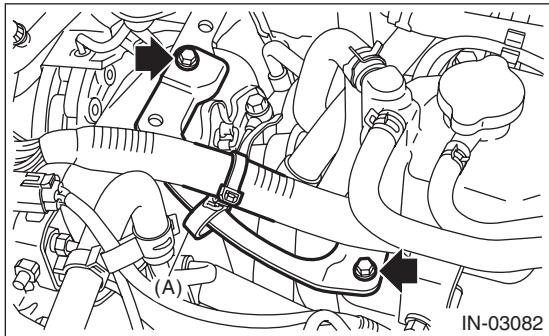

3) Attach the air duct hose to the throttle body.

Tightening torque:



3 N·m (0.3 kgf·m, 2.2 ft-lb)

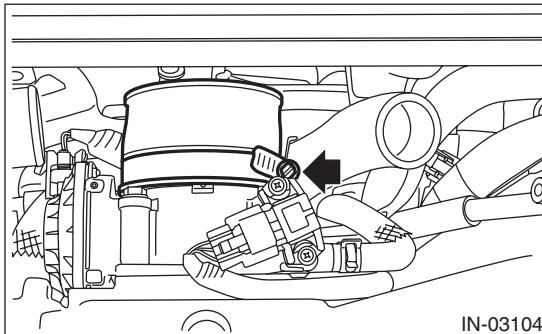

4) Install the intercooler to the intercooler stay.

Tightening torque:

16 N·m (1.6 kgf·m, 11.8 ft-lb)

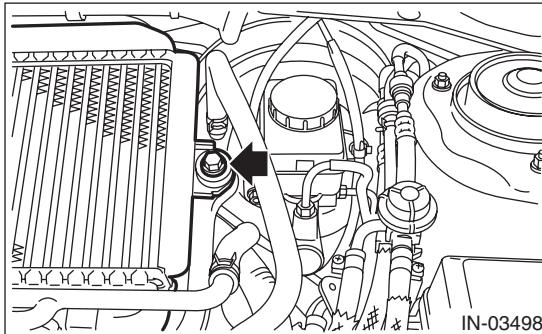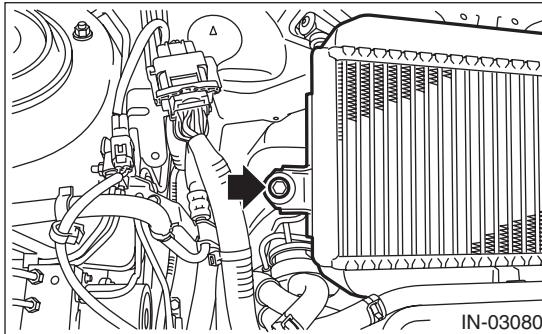

5) Tighten the clamp (A) which secures the intake duct to the turbocharger.

6) Tighten the clamp (B) which secures the air duct hose to the intercooler.

Intercooler

INTAKE (INDUCTION)


7) Install the bolts (C) which secures the air bypass valve to the intercooler, and install the air bypass valve.

NOTE:

Use a new gasket.

Tightening torque:


T1: 3 N·m (0.3 kgf-m, 2.2 ft-lb)
T2: 16 N·m (1.6 kgf-m, 11.8 ft-lb)

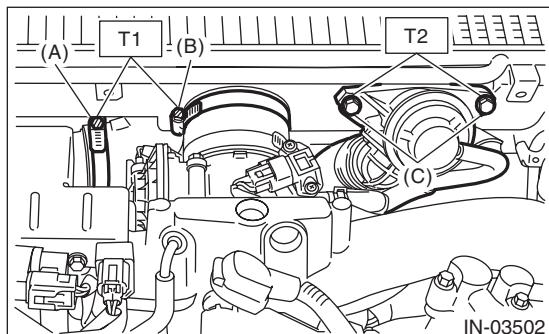

8) Install the PCV pipe to the intercooler.


Tightening torque:

5.5 N·m (0.6 kgf-m, 4.1 ft-lb)

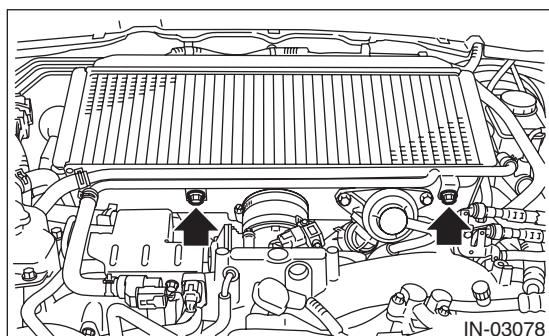


C: DISASSEMBLY

1) Remove the intercooler duct from the intercooler.

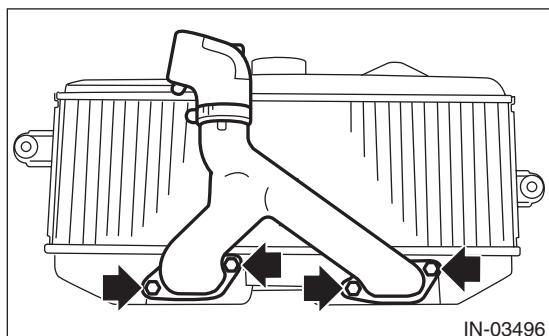

2) Remove the intake duct from intercooler duct.

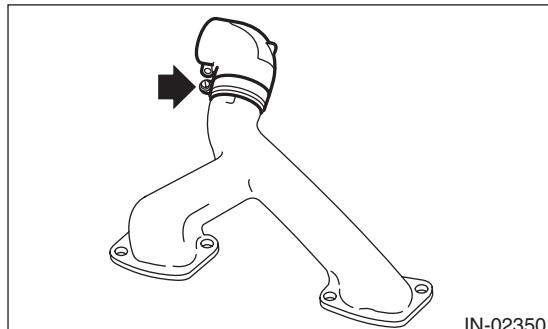


D: ASSEMBLY

1) Install the intake duct to the intercooler duct.

Tightening torque:

3 N·m (0.3 kgf-m, 2.2 ft-lb)

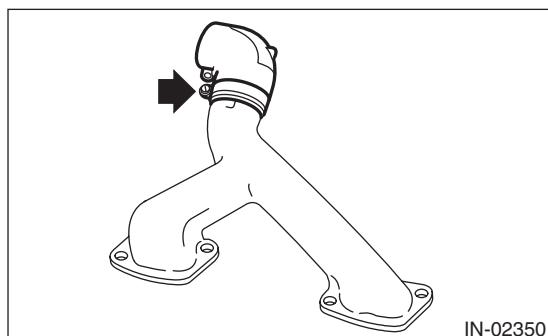


2) Install the intercooler duct to the intercooler.

NOTE:

Use a new gasket.

Tightening torque:

16 N·m (1.6 kgf-m, 11.8 ft-lb)

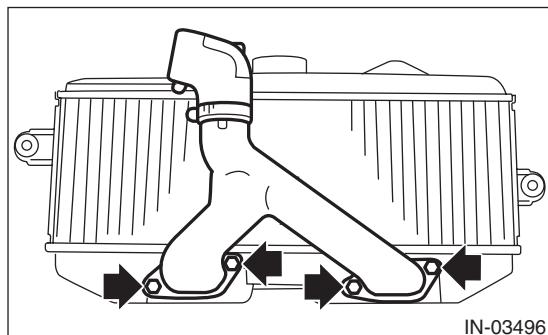

E: INSPECTION

1) Check that the intercooler and intercooler duct have no deformation, cracks or other damages.
2) Check that the hose and intake duct have no cracks, damage or loose part.