

9. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for removal procedure. <Ref. to IN(STI)-8, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for installation procedure. <Ref. to IN(STI)-8, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

	Page
1. General Description	2
2. Compression	20
3. Idle Speed	21
4. Ignition Timing	22
5. Intake Manifold Vacuum	23
6. Engine Oil Pressure	24
7. Fuel Pressure	25
8. Valve Clearance	26
9. Engine Assembly	30
10. Engine Mounting	38
11. Preparation for Overhaul	39
12. V-belt	40
13. Crank Pulley	47
14. Timing Belt Cover	49
15. Timing Belt	50
16. Cam Sprocket	59
17. Crank Sprocket	60
18. Camshaft	61
19. Cylinder Head	70
20. Cylinder Block	80
21. Intake and Exhaust Valve	103
22. Piston	104
23. Connecting Rod	105
24. Crankshaft	106
25. Engine Trouble in General	107
26. Engine Noise	113