

10. Engine Mounting

A: REMOVAL

- 1) Remove the front crossmember. <Ref. to FS-27, REMOVAL, Front Crossmember.>
- 2) Remove the engine mounting from the engine.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

$35 \text{ N}\cdot\text{m}$ (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION

Make sure that no crack or other damages do not exist.