

21.Intake and Exhaust Valve

A: SPECIFICATION

Refer to “Cylinder Head” for removal and installation procedures of the intake and exhaust valves.

<Ref. to ME(STI)-70, REMOVAL, Cylinder Head.>

<Ref. to ME(STI)-70, INSTALLATION, Cylinder Head.>