

### 3. Engine Coolant

#### A: INSPECTION

**NOTE:**

When adding the engine coolant, always use SUBARU Super Coolant.

- 1) Park the vehicle on a level surface.
- 2) Check the engine coolant amount, and if the coolant level is low, check for the coolant leakage, and then add the engine coolant.

- (1) Make sure the engine coolant level in the reservoir tank is between "FULL" and "LOW" with the engine in a cold condition.
- (2) Open the cap of coolant filler tank, and check that the engine coolant is filled up to the filler neck position.


#### B: REPLACEMENT

##### 1. DRAINING OF ENGINE COOLANT

- 1) Lift up the vehicle.
- 2) Remove the under cover. <Ref. to EI-28, REMOVAL, Front Under Cover.>
- 3) Remove the drain plug to drain engine coolant into container.

**NOTE:**

Remove the coolant filler tank cap so that engine coolant will drain faster.

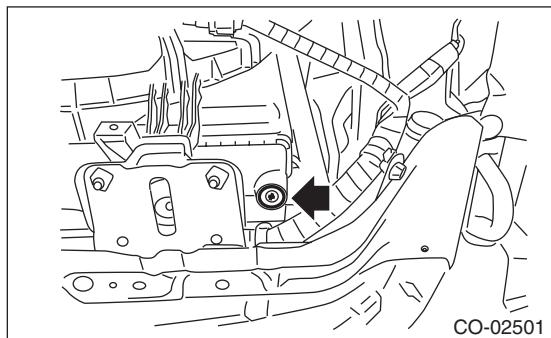

- 4) Install the drain plug.

**NOTE:**

Use new O-rings.

- 5) Install the under cover. <Ref. to EI-28, INSTALLATION, Front Under Cover.>

#### 2. FILLING OF ENGINE COOLANT

- 1) Pour cooling system conditioner through the filler neck of coolant filler tank.

**Cooling system protective agent:**

*Refer to "SPECIFICATION" for cooling system protective agent. <Ref. to CO(w/o STI)-2, SPECIFICATION, General Description.>*

- 2) Fill the engine coolant into coolant filler tank up to the filler neck position.

**Recommended engine coolant:**

*Refer to "SPECIFICATION" for recommended engine coolant. <Ref. to CO(w/o STI)-2, SPECIFICATION, General Description.>*

**Engine coolant level:**

*Refer to "SPECIFICATION" for engine coolant level. <Ref. to CO(w/o STI)-2, SPECIFICATION, General Description.>*

**Engine coolant concentration:**


*Refer to "ADJUSTMENT" for the recommended engine coolant concentration. <Ref. to CO(w/o STI)-14, ADJUSTMENT, Engine Coolant.>*

**CAUTION:**

**Do not confuse the cap of coolant filler tank and cap of radiator.**

**NOTE:**

- When pouring the engine coolant, the radiator side cap must not be removed.
- The SUBARU Super Coolant contains anti-freeze and anti-rust agents, and is especially made for Subaru engines with an aluminum cylinder block. Be sure to use SUBARU Super Coolant, since other coolant may cause corrosion.
- 3) Fill engine coolant into the reservoir tank up to "FULL" level.

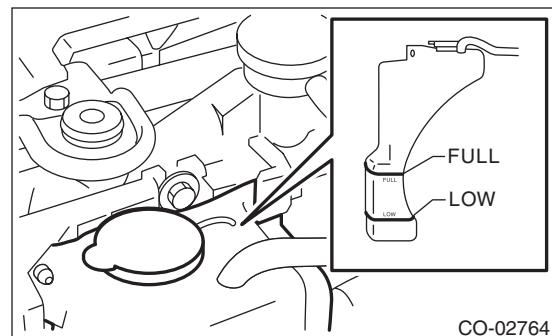

# Engine Coolant

## COOLING

---

- 4) Close the coolant filler tank cap, and start the engine. Race 5 to 6 times at 3,000 rpm or less, then stop the engine. (Complete this operation within 40 seconds.)
- 5) Wait for one minute after the engine stops, then open the coolant filler tank cap. If the engine coolant level drops, add engine coolant into coolant filler tank up to the filler neck position.
- 6) Perform the procedures 4) and 5) again.
- 7) Install the coolant filler tank cap and reservoir tank cap properly.
- 8) Start the engine and operate the heater at maximum hot position and the blower speed setting to "LO".
- 9) Run the engine at 3,000 rpm or less until radiator fan starts and stops.

### NOTE:

Be careful with the engine coolant temperature to prevent overheating.

- 10) Stop the engine and wait until the engine coolant temperature lowers to 30°C (86°F) or less.
- 11) Open the coolant filler tank cap. If the engine coolant level drops, add engine coolant into the coolant filler tank up to the filler neck position and the reservoir tank to "FULL" level.
- 12) Install the coolant filler tank cap and reservoir tank cap properly.
- 13) Set the heater setting to maximum hot position and the blower speed setting to "LO" and start the engine. Perform racing at 3,000 rpm or less. If the flowing sound is heard from the heater core, repeat the procedures from step 9).

## C: ADJUSTMENT

### 1. PROCEDURE TO ADJUST THE SUBARU SUPER COOLANT CONCENTRATION

#### CAUTION:

**Use the SUBARU Super Coolant with a 50 — 60% concentration in order to obtain maximum anti-freeze and anti-rust performance.**

To adjust the concentration of SUBARU Super Coolant according to temperature, find the proper SUBARU Super Coolant concentration in the table, and add dilution water to the SUBARU Super Coolant (concentrated type) until it reaches the proper dilution.

Relationship of SUBARU Super Coolant concentration and freezing temperature			
SUBARU Super Coolant concentration	50%	55%	60%
Freezing temperature	-36°C (-33°F)	-41°C (-42°F)	-50°C (-58°F)

#### **Engine coolant and diluting water:**

**Refer to "SPECIFICATION" for recommended engine coolant and diluting water. <Ref. to CO(w/o STI)-2, SPECIFICATION, General Description.>**