

## 13.Tumble Generator Valve Actuator

### A: SPECIFICATION

The tumble generator valve assembly cannot be disassembled.

Refer to "Tumble Generator Valve Assembly" for removal and installation procedures. <Ref. to FU(w/o STI)-48, REMOVAL, Tumble Generator Valve Assembly.> <Ref. to FU(w/o STI)-48, INSTALLATION, Tumble Generator Valve Assembly.>