

30. Fuel Damper

A: REMOVAL

WARNING:

Place "NO OPEN FLAMES" signs near the working area.

CAUTION:


- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(w/o STI)-65, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Disconnect the fuel delivery hose (A) and fuel return hose (B) from the fuel damper, and remove the fuel damper.

NOTE:

Fuel dampers on delivery side and return side are different. Be careful not to confuse them.

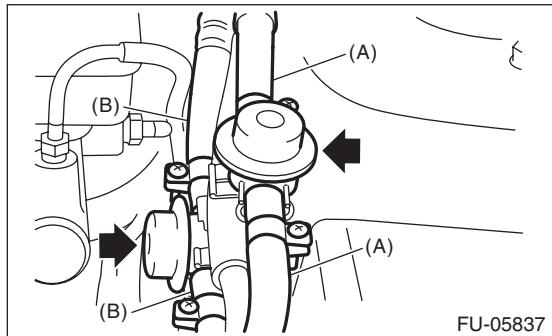

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- Fuel dampers on delivery side and return side are different. Be careful not to confuse them.
- For the information about connecting the fuel delivery hose and fuel return hose, refer to "Fuel Delivery, Return and Evaporation Lines". <Ref. to FU(w/o STI)-93, CONNECTING FUEL DELIVERY HOSE, FUEL RETURN HOSE AND FUEL HOSE, INSTALLATION, Fuel Delivery, Return and Evaporation Lines.>