


## 31. Purge Damper

### A: REMOVAL


**WARNING:**

Place "NO OPEN FLAMES" signs near the working area.

- 1) Remove the bolts which secure the purge damper to the purge damper bracket.

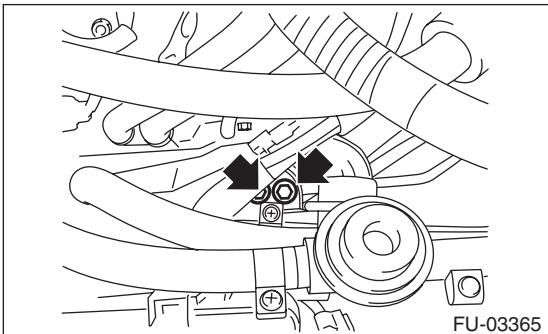

- 2) Disconnect the evaporation hose from the purge damper and remove the purge damper.

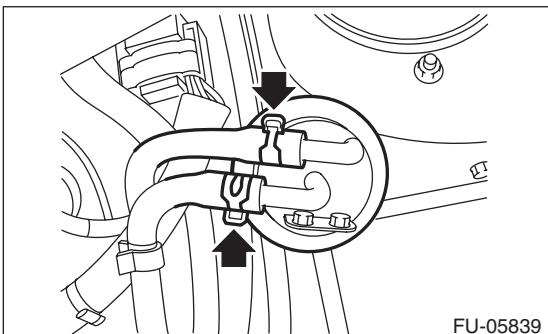


### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

13 N·m (1.3 kgf·m, 9.6 ft-lb)

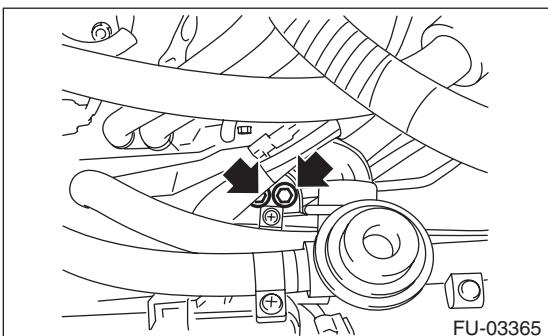

### C: INSPECTION

- 1) Check that the purge damper has no deformation, cracks or other damages.
- 2) Check that the evaporation hose has no cracks, damage or loose part.