



7. Knock Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery.

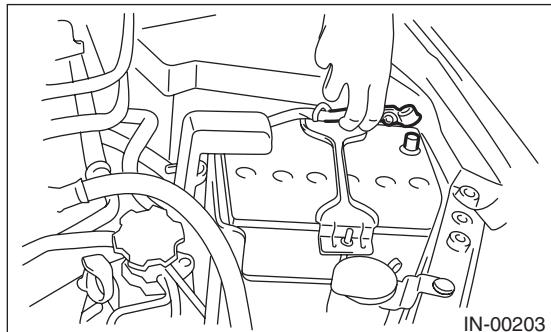

- 2) Remove the intercooler. <Ref. to IN(w/o STI)-12, REMOVAL, Intercooler.>
- 3) Disconnect the connector from the knock sensor.

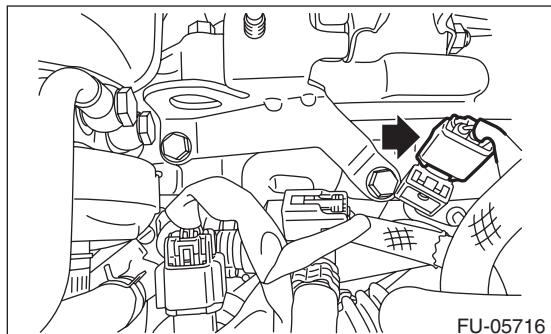

- 4) Remove the knock sensor from cylinder block.

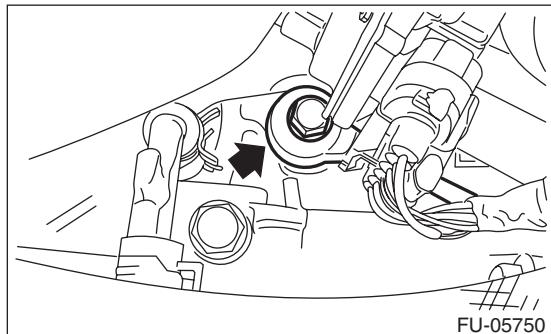

B: INSTALLATION


- 1) Install the knock sensor to the cylinder block.

NOTE:


The portion of the knock sensor cord that is pulled out must be positioned at a 60° angle relative to the engine rear.

Tightening torque:


24 N·m (2.4 kgf·m, 17.7 ft·lb)

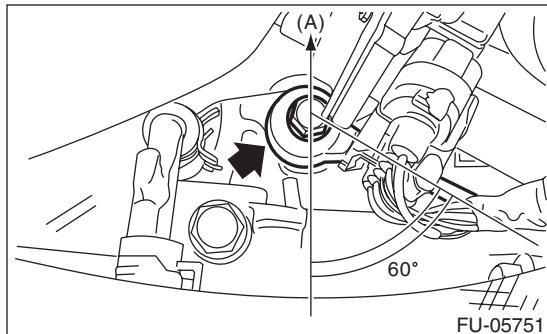

- 2) Connect the connector to the knock sensor.

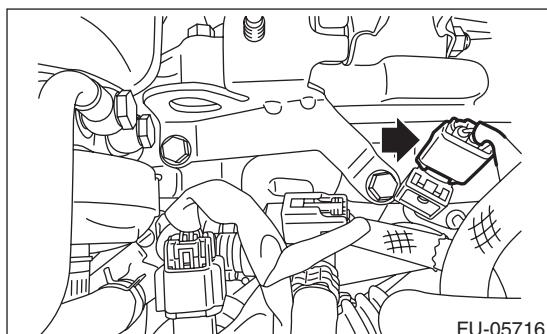

- 3) Install the intercooler. <Ref. to IN(w/o STI)-12, INSTALLATION, Intercooler.>
- 4) Connect the battery ground terminal.

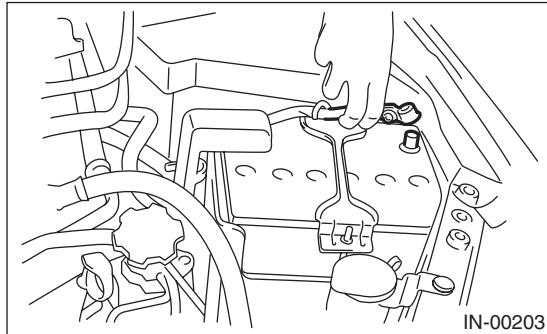


Knock Sensor

FUEL INJECTION (FUEL SYSTEMS)

C: INSPECTION

- 1) Check that the knock sensor has no deformation, cracks or other damages.
- 2) Measure the resistance between knock sensor terminals.

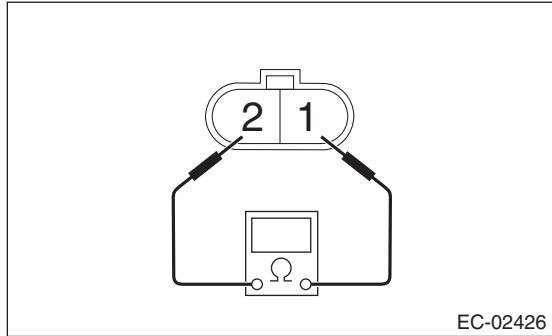

Terminal No.	Standard
1 and 2	$560 \pm 28 \text{ k}\Omega$