

21. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves.

<Ref. to ME(w/o STI)-68, REMOVAL, Cylinder Head.> <Ref. to ME(w/o STI)-68, INSTALLATION, Cylinder Head.>