

14. Transmission Gear Oil

A: INSPECTION

1. 6MT MODEL

Refer to “6MT” section for transmission gear oil inspection. <Ref. to 6MT-26, INSPECTION, Transmission Gear Oil.>

2. 5MT MODEL

Refer to “5MT” section for transmission gear oil inspection. <Ref. to 5MT-22, INSPECTION, Transmission Gear Oil.>

B: REPLACEMENT

1. 6MT MODEL

Refer to “6MT” section for transmission gear oil replacement. <Ref. to 6MT-26, REPLACEMENT, Transmission Gear Oil.>

2. 5MT MODEL

Refer to “5MT” section for transmission gear oil replacement. <Ref. to 5MT-22, REPLACEMENT, Transmission Gear Oil.>