

15. Front & Rear Differential Gear Oil

A: INSPECTION

1. FRONT DIFFERENTIAL

Refer to “6MT” or “5MT” section for front differential gear oil inspection. <Ref. to 6MT-26, INSPECTION, Transmission Gear Oil.> <Ref. to 5MT-22, INSPECTION, Transmission Gear Oil.>

2. REAR DIFFERENTIAL

Refer to “DI” section for rear differential gear oil inspection. <Ref. to DI-18, INSPECTION, Differential Gear Oil.>

B: REPLACEMENT

1. FRONT DIFFERENTIAL

As well as transmission oil, differential oil is used to lubricate the differential. Refer to “Transmission Oil”. <Ref. to PM-22, Transmission Gear Oil.>

2. REAR DIFFERENTIAL

Refer to “DI” section for rear differential gear oil replacement. <Ref. to DI-19, REPLACEMENT, Differential Gear Oil.>