


5. Spark Plug

A: REPLACEMENT

1. RH SIDE

- 1) Disconnect the ground cable from battery.

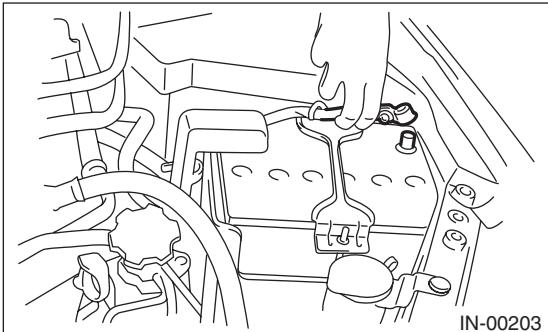


- 2) Remove the air cleaner case. <Ref. to IN(STI)-8, REMOVAL, Air Cleaner Case.> <Ref. to IN(w/o STI)-8, REMOVAL, Air Cleaner Case.>

- 3) Disconnect the connector from ignition coil.
- 4) Remove the ignition coil.

NOTE:

Turn #3 ignition coil by 180° to remove it.

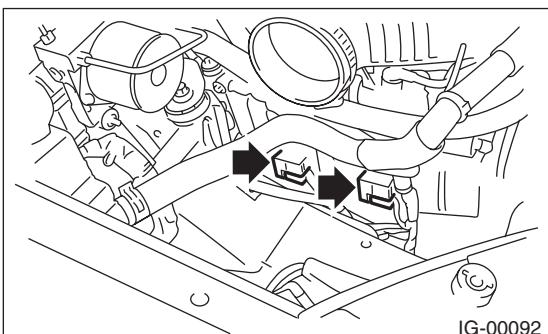

- 5) Remove the spark plug with a spark plug socket.

- 6) Install in the reverse order of removal.

Tightening torque (spark plug):

21 N·m (2.1 kgf-m, 15.5 ft-lb)

Tightening torque (ignition coil):

16 N·m (1.6 kgf-m, 11.8 ft-lb)



2. LH SIDE

- 1) Remove the battery. <Ref. to SC(STI)-27, REMOVAL, Battery.>



- 2) Remove the secondary air pump. <Ref. to EC(STI)-27, REMOVAL, Secondary Air Pump.> <Ref. to EC(w/o STI)-29, REMOVAL, Secondary Air Pump.>

- 3) Remove the bolts that secure the air duct to the rocker cover (LH), and lift the air duct.

- STI model

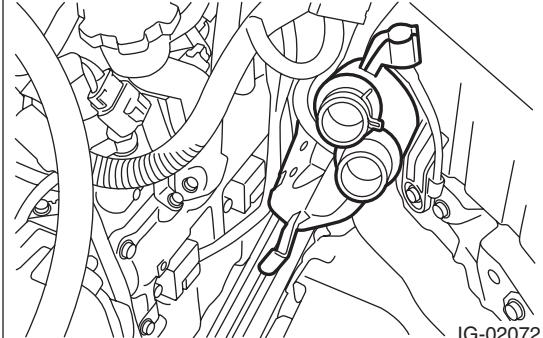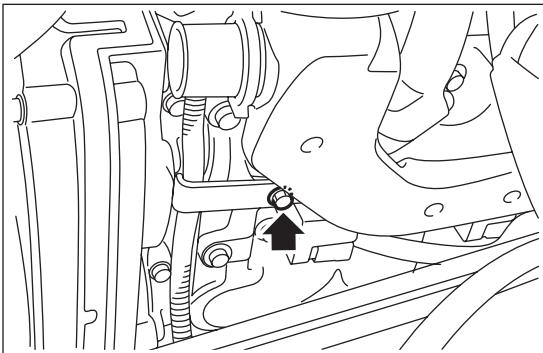

- Except for STI model

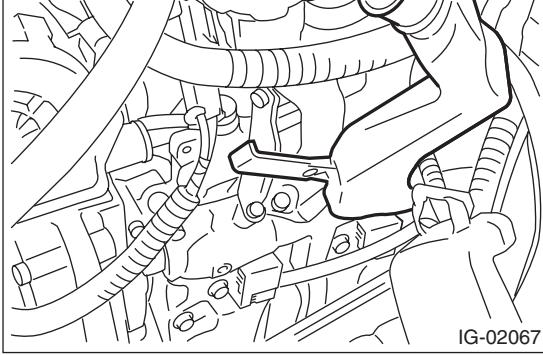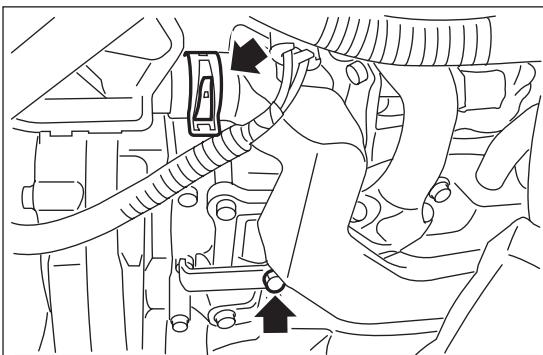


- 4) Disconnect the connector from ignition coil.

5) Remove the ignition coil.


NOTE:

Turn #4 ignition coil by 180 degrees to remove it.

- STI model

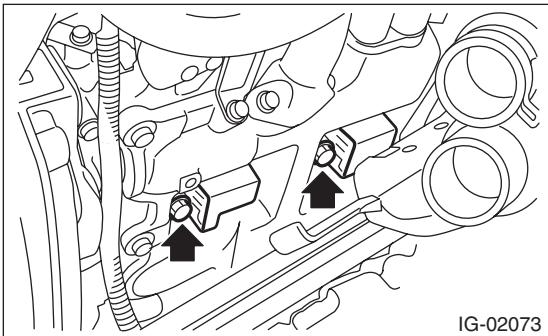

- Except for STI model

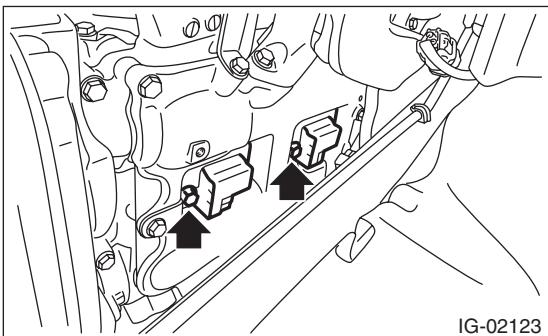

6) Remove the spark plug with a spark plug socket.

7) Install in the reverse order of removal.

Tightening torque (Spark plug):

21 N·m (2.1 kgf·m, 15.5 ft-lb)

Tightening torque (Ignition coil):

16 N·m (1.6 kgf·m, 11.8 ft-lb)

Tightening torque (Air duct):

6.4 N·m (0.7 kgf·m, 4.7 ft-lb)