


24. Driver's Control Center Differential Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower. <Ref. to EI-54, INSTRUMENT PANEL LOWER, REMOVAL, Center Console.>
- 3) Remove the driver's control center differential control module by disconnecting the connector.

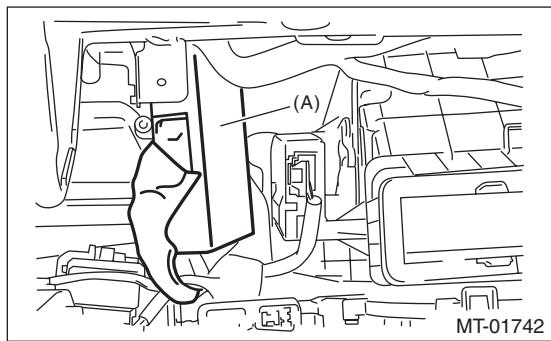

(A) Driver's control center differential control module

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

15 N·m (1.5 kgf-m, 11.1 ft-lb)