


8. Air Breather Hose


A: REMOVAL

Disconnect the air breather hose.

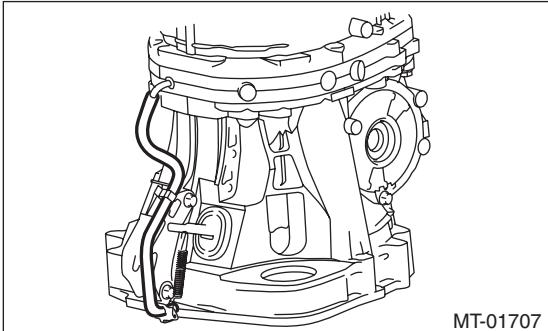

B: INSTALLATION

Connect the air breather hose.

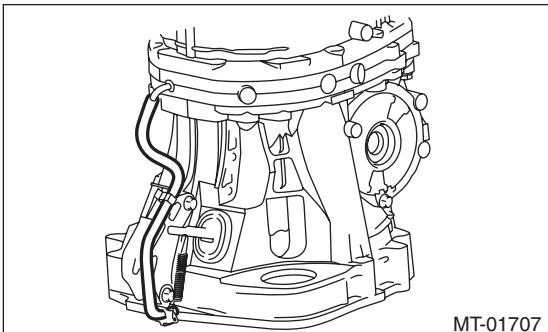

C: INSPECTION

Make sure the hose is not cracked or clogged.