

List of Diagnostic Trouble Code (DTC)

MANUAL TRANSMISSION AND DIFFERENTIAL (DIAGNOSTICS)

12. List of Diagnostic Trouble Code (DTC)

A: LIST

1. SUBARU SELECT MONITOR DISPLAY

DTC	Item	Content of diagnosis	Reference
P1521	Brake Switch Circuit Range/Performance Problem (High Input)	Stop light switch circuit is open or shorted.	<Ref. to 6MT(diag)-20, DTC P1521 BRAKE SWITCH CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1720	DCCD CAN System Circuit	CAN communication circuit is open or shorted.	<Ref. to 6MT(diag)-21, DTC P1720 DCCD CAN SYSTEM CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1767	DCCD Steering Angle Sensor	Open, short or communication failure of the steering angle sensor circuit	<Ref. to 6MT(diag)-22, DTC P1767 DCCD STEERING ANGLE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1769	Yaw Rate & Lateral G Sensor Malfunction	Yaw rate & lateral G sensor malfunction	<Ref. to 6MT(diag)-23, DTC P1769 YAW RATE & LATERAL G SENSOR MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1875	Circuit of Center Diff	Open or short in the driver's control center differential circuit	<Ref. to 6MT(diag)-24, DTC P1875 CIRCUIT OF CENTER DIFF, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>