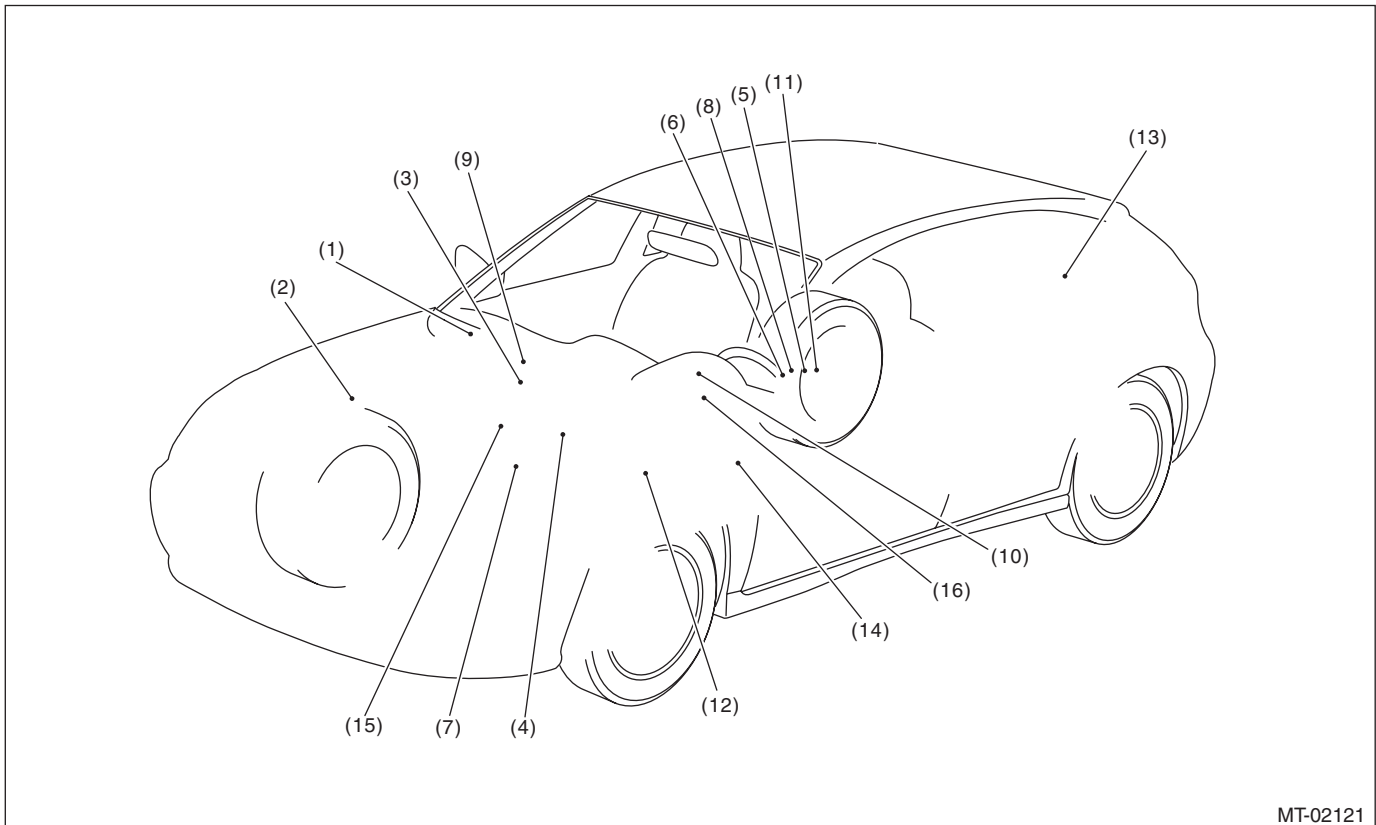


Electrical Component Location

MANUAL TRANSMISSION AND DIFFERENTIAL (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION













MT-02121

- | | | |
|---|-------------------------------|---|
| (1) Engine control module (ECM) | (7) Center differential | (12) Stop light switch |
| (2) VDC control module and hydraulic control unit (VDCCM&H/U) | (8) Mode change switch | (13) Rear differential oil temperature switch |
| (3) DCCD control module | (9) DCCD relay | (14) Data link connector |
| (4) Throttle position sensor | (10) DCCD manual mode display | (15) Neutral position switch |
| (5) Yaw rate & G sensor | (11) Parking brake switch | (16) Steering angle sensor |
| (6) C.DIFF +/- switch | | |


Electrical Component Location

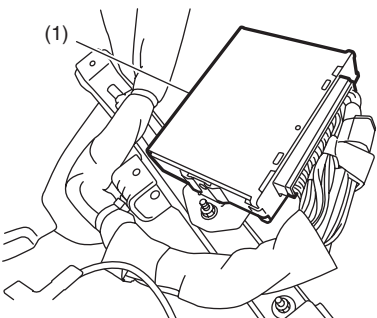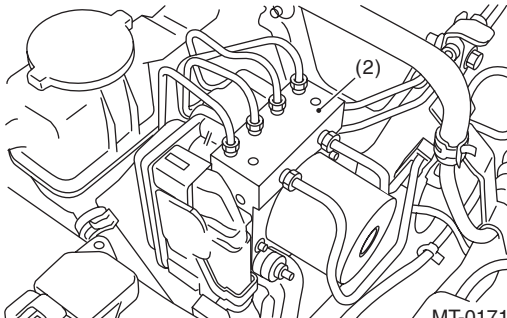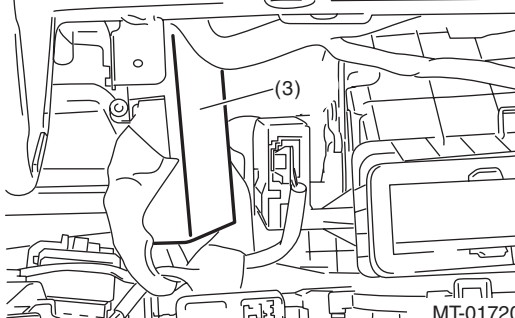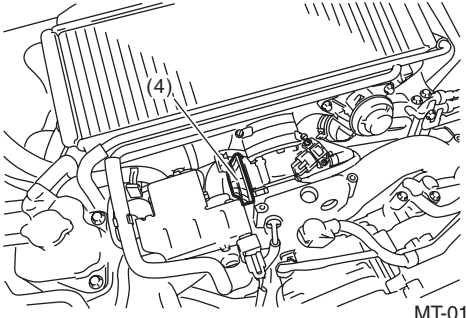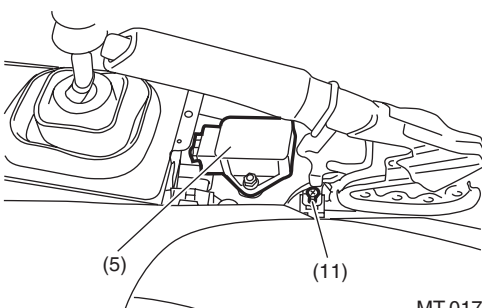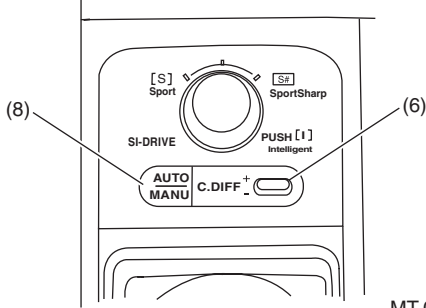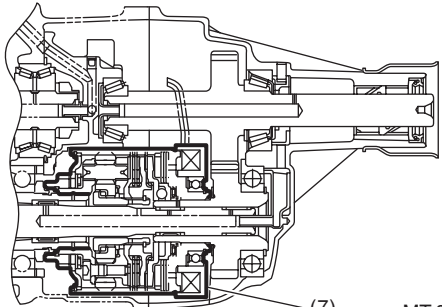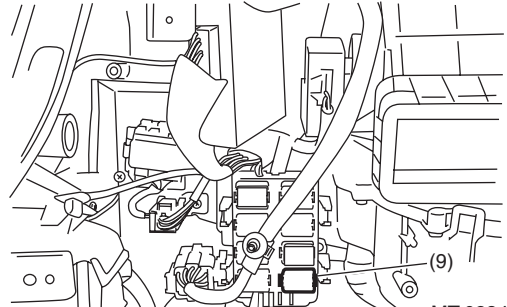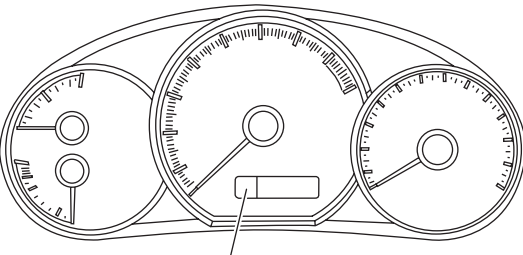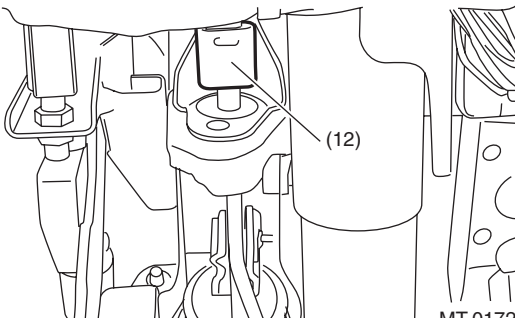MANUAL TRANSMISSION AND DIFFERENTIAL (DIAGNOSTICS)


 MT-02338	 MT-01719
 MT-01720	 MT-01721
 MT-01722	 MT-01693
 MT-01455	 MT-02340
 MT-02311	 MT-01724

Electrical Component Location

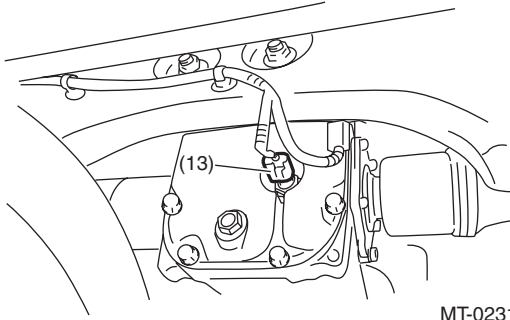
MANUAL TRANSMISSION AND DIFFERENTIAL (DIAGNOSTICS)




MT-02310

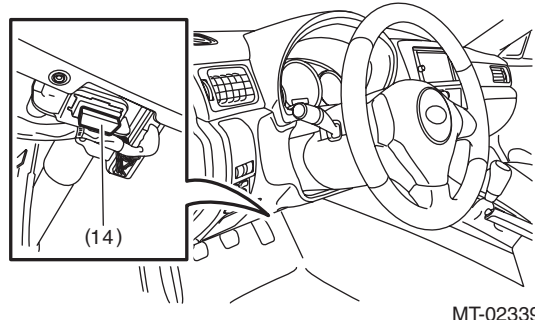

MT-02339

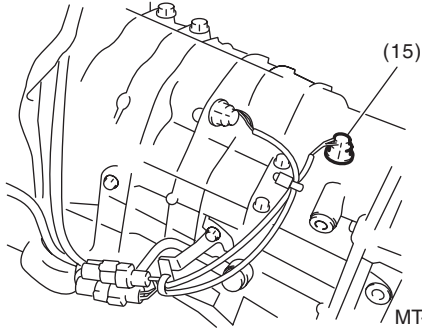

MT-02130

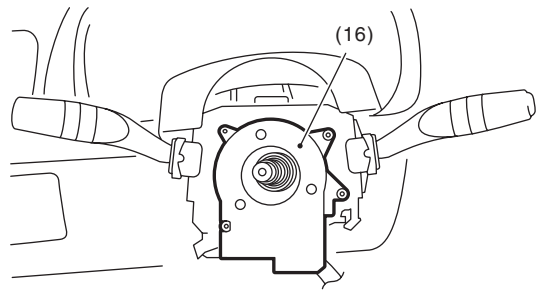

MT-02117