

### 8. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

- 1) Using the Subaru Select Monitor, on the «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Transmission Control System}.
- 3) After the {Center Differential Control} is displayed, select [OK].
- 4) On «Transmission Diagnosis» display, select {Diagnostic Code(s) Display}.
- 5) On the «Diagnostic Code(s) Display» screen, select the {Temporary Diagnostic Code(s)} or {Memorized Diagnostic Code(s)}

NOTE:

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For details concerning DTCs, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to 6MT(diag)-19, List of Diagnostic Trouble Code (DTC).>