

9. Clear Memory Mode

A: OPERATION

- 1) Place the shift lever in neutral.
- 2) Using the Subaru Select Monitor, on the «Main Menu» display, select {Each System Check}.
- 3) On «System Selection Menu» display, select {Transmission Control System}.
- 4) After the {Center Differential Control} is displayed, select [OK].
- 5) On «Transmission Diagnosis» display, select {Clear Memory}.
- 6) When “Done. Turn off the ignition switch.” is displayed, select [OK].
- 7) Turn the Subaru Select Monitor and ignition switch to OFF. To turn the ignition switch to ON again, wait for 10 seconds or more.

NOTE:

- To clear the previous DTC, use {Clear Memory}.
- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.