

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

53.Bulkhead Wiring Harness (In Engine Compartment)

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B6	2	Light gray	B-3		Front ABS wheel speed sensor RH
B8	5	Light gray	B-4		Front wiper motor
B10	4	Light gray	B-4		Pressure switch
B14	1	Black	B-3		Starter motor
B15	2	Light gray	B-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B19	4	Light gray	B-3	T5	Rear oxygen sensor
B21	54	Black	B-2	E2	Engine wiring harness
B128	4	Light gray	B-3	T9	Transmission cord (5MT model)
	6	Light gray	B-3	T9	Transmission cord (6MT model)
B143	20	★	B-4		Main fuse box (M/B)
B144	9	Brown	B-4		
B145	7	Brown	B-4		
B146	2	Dark gray	C-4		Front washer motor
B147	2	Green	C-4		Rear washer motor
B164	2	Black	C-3		Keyless buzzer
B186	8	★	B-4		Main fuse box (M/B)
B310	46	Black	B-2		VDC CM
B360	16	Gray	B-4	F109	Through joint connector
B361	14	Gray	B-4	F108	
B379	4	Dark gray	B-2		Front oxygen (A/F) sensor

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

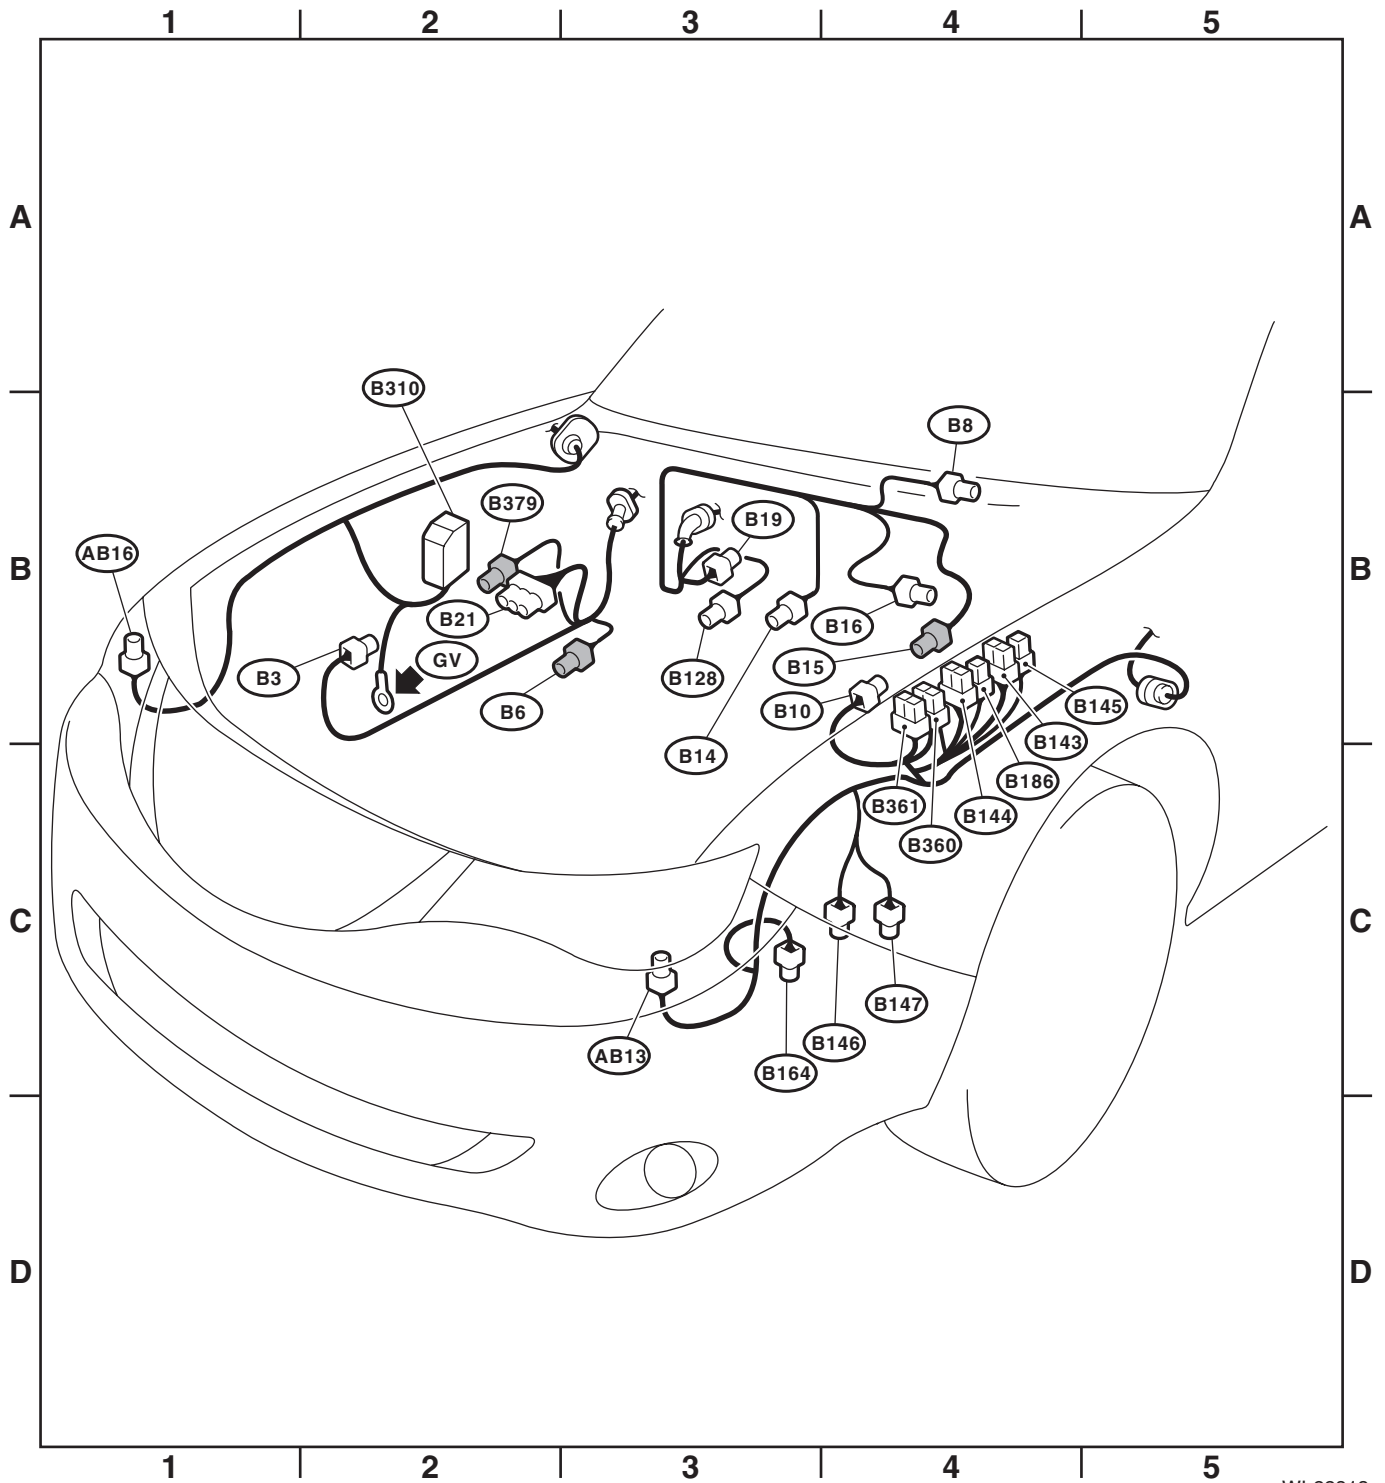

WI-22813