

57.Rear Wiring Harness

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	12	★	B-1	B97	Bulkhead wiring harness
R2	20	★	B-1	B98	
R3	12	★	C-3	B99	
R4	1	★	C-3		Parking brake switch
R5	20	★	C-3	B92	Bulkhead wiring harness
R9	3	★	C-4		Front door switch LH
R10	8	★	C-4	D22	Rear door cord LH
R12	3	★	B-2		Front door switch RH
R13	8	★	B-2	D28	Rear door cord RH
R15	12	★	B-4	R57	Fuel cord
R16	3	★	A-3		Rear door switch RH
R32	2	★	B-3		Rear accessory power supply socket (without SI-DRIVE)
R33	10	★	C-2	AD10	Multi select switch (with SI-DRIVE)
R34	20	★	C-3	AD6	Adapter cord
R41	4	★	C-3		Seat heater LH
R42	4	★	B-3		Seat heater switch RH (without SI-DRIVE)
R43	4	Blue	B-3		Seat heater switch LH (without SI-DRIVE)
R44	4	★	B-3		Seat heater RH
R50	12	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	10	Light gray	B-3		Sunroof motor assembly
R56	2	★	B-2		Spot map light (with sunroof)
	6	★	B-2		Spot map light (without sunroof)
R57	12	★	B-4	R15	Rear wiring harness RH
R58	6	★	B-4		Fuel pump assembly
R59	2	★	B-5		Fuel sub level sensor
R62	6	★	B-3		Spot map light (with sunroof)
R64	3	★	B-2		Spot map light diode (with sunroof)
R68	2	Dark gray	B-4		Pressure control solenoid valve
R72	2	Light gray	B-4		Rear ABS wheel speed sensor RH
R73	2	Light gray	B-4		Rear ABS wheel speed sensor LH
R81	12	Black	C-3	R82	Rear wiring harness RH
R82	12	Black	B-3	R81	Rear wiring harness LH
R98	16	★	B-1	i53	Instrument panel wiring harness
R99	10	★	B-1	i54	
R107	4	★	C-3		Seat belt switch LH
R128	5	★	B-3		Sunroof switch
R139	3	★	B-3		Rear view mirror
R167	16	★	C-3	i102	Instrument panel wiring harness
R168	20	★	C-3		Fuse & relay box (F/B)
R187	5	Black	B-3		Sunroof switch (tilt)
R284	6	★	B-3		AUX input terminal

★ : White or natural color


Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	15	Yellow	C-2		Airbag CM
AB18	15	Yellow	C-2		
AB19	4	Yellow	C-3		Side airbag module LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	4	Yellow	B-2		Side airbag module RH
AB26	2	Black	B-2		Pretensioner RH
AB28	4	Yellow	B-2		Side airbag sensor RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
AB35	2	Black	C-3		Fuse & relay box (F/B)
AB41	2	Yellow	B-4		Satellite safing sensor
AB53	6	Gray	B-2		Occupant detection control module
AB56	3	Brown	B-3		Belt tension sensor

Rear Wiring Harness

WIRING SYSTEM

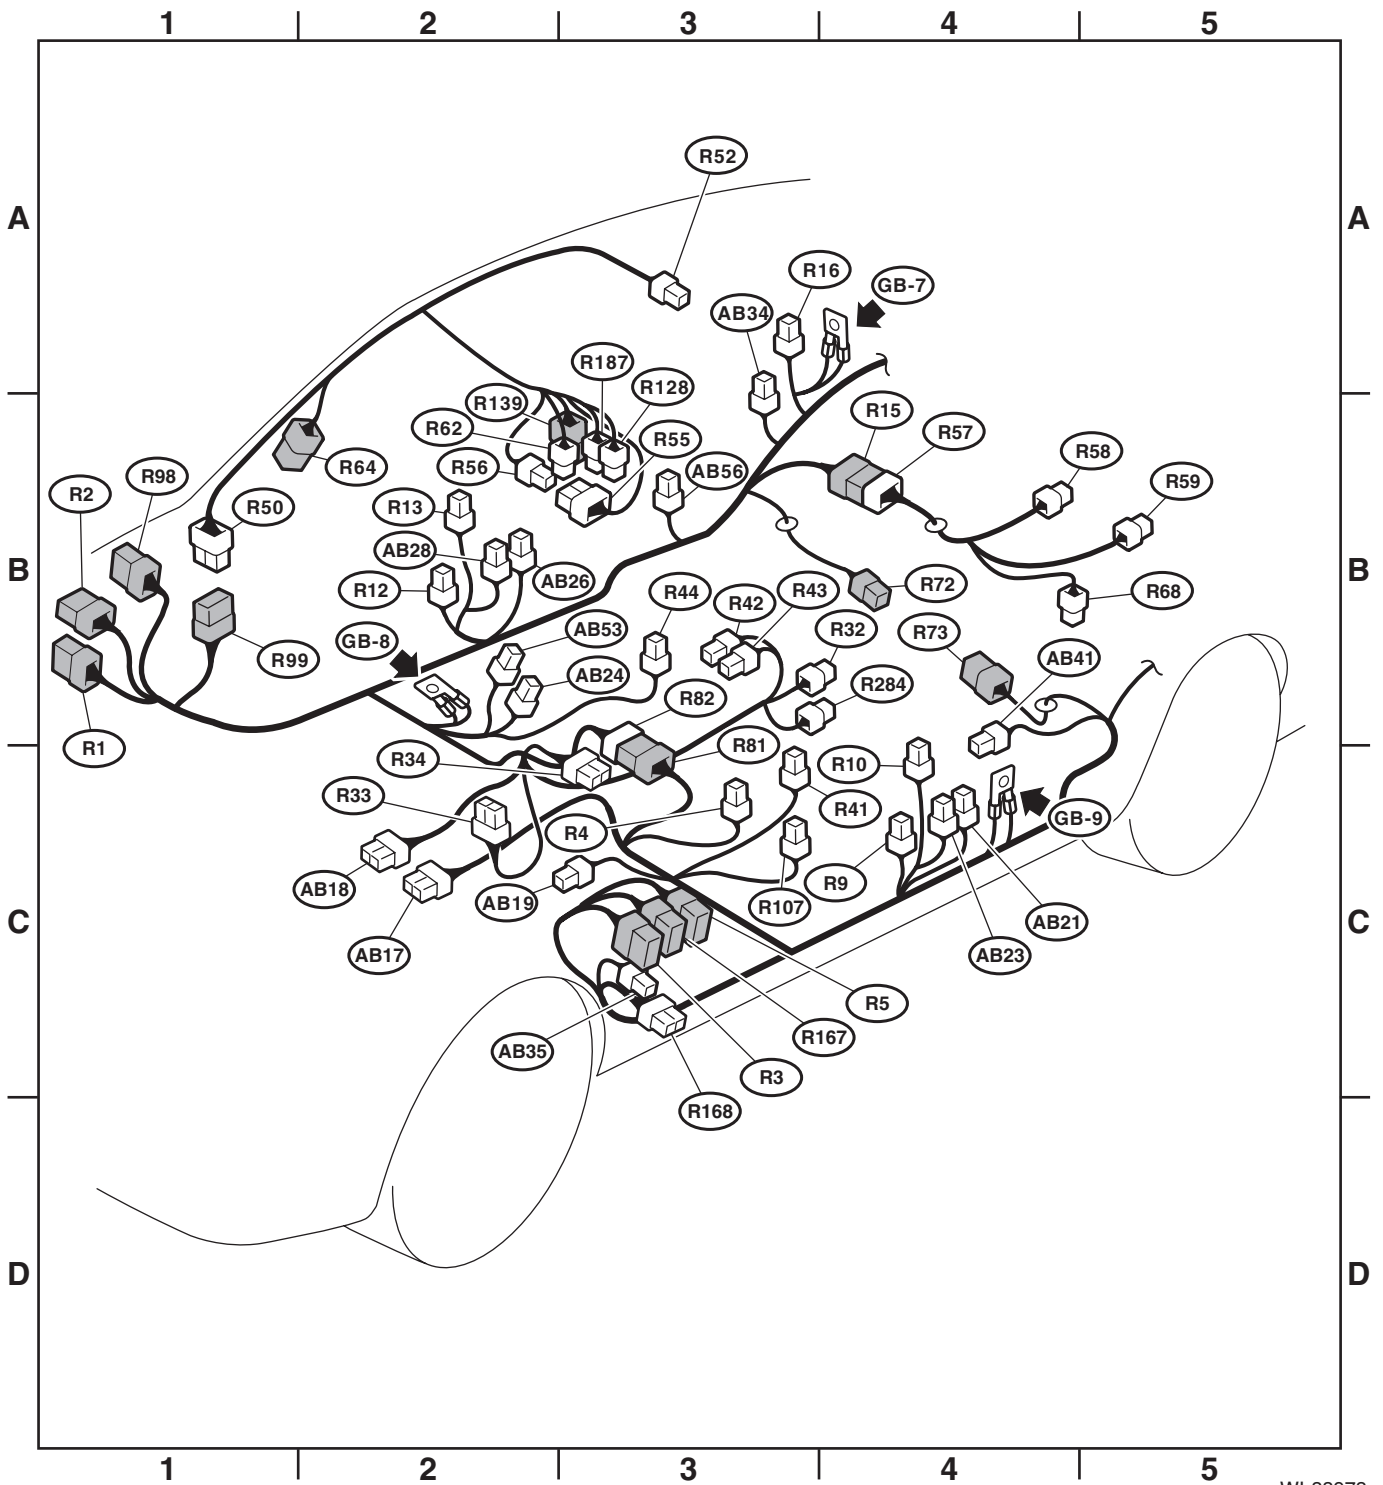

WI-33973