


Starter System

WIRING SYSTEM

8. Starter System A: WIRING DIAGRAM

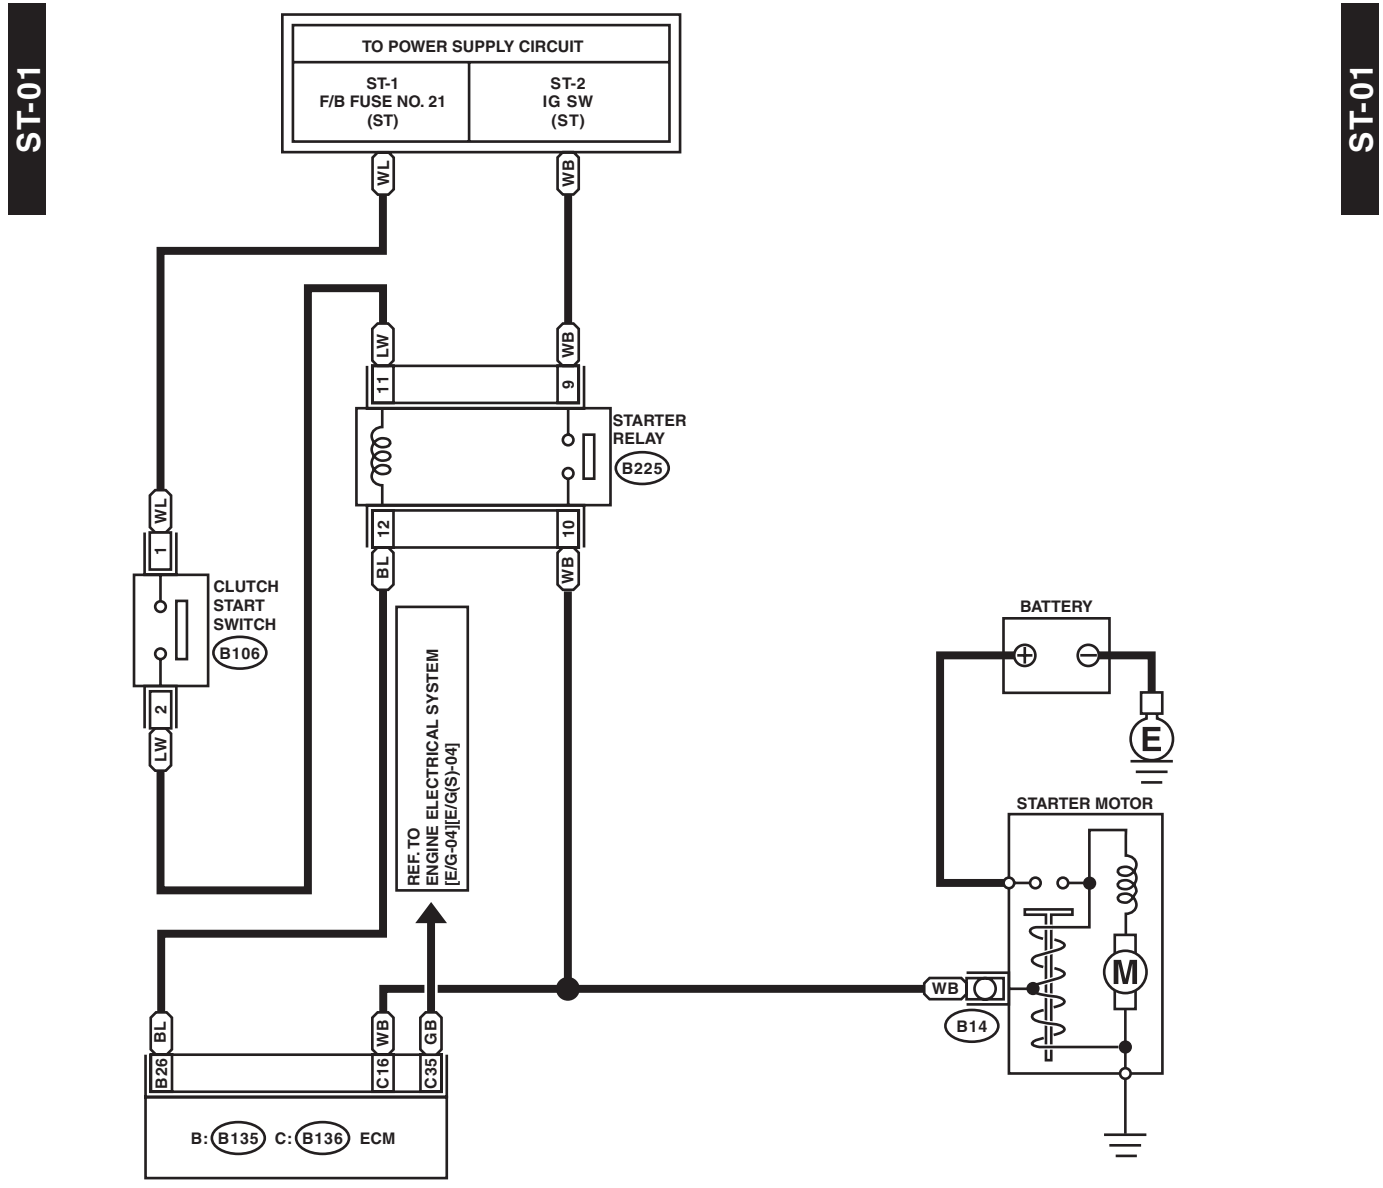

(B106)

1
2

B: (B135)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: (B136)

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

(B225) (BLACK)

1	2	9	13	17	21
3	4	10	14	18	22
5	6	11	12	15	16
7	8	19	20	23	24
25	29	33	37		
26	30	34	38		
27	28	31	32	35	36
39	40				

RELAY BLOCK

WI-33815