

Basic Diagnostic Procedure

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

CAUTION:

- Subaru Select Monitor kit is required for reading DTC, performing diagnosis and reading current data.
- Before removal or installation, be sure to remove any foreign matter (dust, moisture, oil, etc.).
- For models with the keyless access system, registration of the immobilizer may be required after a replacement of the control module, etc. For detailed procedure, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.

NOTE:

- Using the Function Setting (Customize), check that the keyless access system is not in a cancelled state. <Ref. to SL-119, OPERATION, Function Setting (Customize).>
- Check List for Interview <Ref. to KPS(diag)-4, Check List for Interview.>

Step	Check	Yes	No
1 CHECK BATTERY. Using a tester, measure the battery voltage.	Is the voltage 11 V or more?	Go to step 2.	Charge or replace the battery and perform check pre-inspection. Go to step 2.
2 CHECK PRE-INSPECTION. Use the interview check list to interview the user. <Ref. to KPS(diag)-4, Check List for Interview.>	Was the symptoms of the trouble recorded in the interview?	Go to step 3.	Interview the user again.
3 BASIC INSPECTION. Perform the inspection for LAN system. <Ref. to LAN(diag)-2, PROCEDURE, Basic Diagnostic Procedure.>	Is LAN system normal?	Go to step 4.	Check it according to DTC of LAN system. <Ref. to LAN(diag)-2, PROCEDURE, Basic Diagnostic Procedure.>
4 CHECK TROUBLE SYMPTOM. 1) Read diagnostic trouble code (DTC) for the keyless access system. <Ref. to KPS(diag)-27, OPERATION, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of the Subaru Select Monitor cannot be executed properly, check the communication circuit. <Ref. to KPS(diag)-23, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Subaru Select Monitor.> 2) Record all DTCs, time stamp and freeze frame data. NOTE: For time stamp, refer to “LAN SYSTEM”. <Ref. to LAN(diag)-6, TIME STAMP, CAUTION, General Description.>	Is DTC displayed on Subaru Select Monitor?	Perform diagnosis according to the DTC. After diagnosis, Go to step 7.	Go to step 5.
5 CHECK PHENOMENON LIST. Check the “Phenomenon List”. <Ref. to KPS(diag)-110, General Diagnostic Table.>	Is there a symptom that corresponds in the phenomenon list?	Perform diagnosis according to the procedures in the phenomenon list.	Go to step 6.
6 CHECK TROUBLE PHENOMENON. 1) Perform check of current data. 2) Perform a function check. 3) Perform a unit check.	Was the trouble cause found?	Repair the cause of trouble.	Repeat a basic check again.

Basic Diagnostic Procedure

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

	Step	Check	Yes	No
7	PERFORM DIAGNOSIS. 1) Perform the Clear Memory Mode. 2) Perform the Inspection Mode. <Ref. to KPS(diag)-35, Inspection Mode.>	Is DTC displayed on Subaru Select Monitor?	Perform diagnosis according to the DTC.	Finish the diagnosis.