

# User Customizing

## BODY CONTROL SYSTEM (DIAGNOSTICS)

## 10. User Customizing

### A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Integ. unit mode}.
- 3) On «Integ. unit mode failure diag.» display, select {Work Support}.
- 4) On «Work Support» display, select {Unit customizing}.
- 5) Change the setting with UP/DOWN key and set with the [OK] key.

List of User Customizing item

Data	Initial setting value	Customize setting	Note
Off delay time	30s	OFF	Room light off delay time can be selected.
		10 Sec	
		20 Sec	
		30s	
Auto Light Sensitivity Adjustment	Normal	Dull	Slow response
		Normal	Standard
		Sensitive	Quick response
		Very sensitive	Fairly quick response
Rear wiper auto setting	—	ON	
		OFF	
TPMS Setting	— (*1)	TPMS	Set to "ON" for model with TPMS.
		No TPMS	
Driver's Door Unlock Setting	Select	Select	When the touch sensor (unlock) on the driver's side is touched, only the driver's door is unlocked. When the touch sensor (unlock) on the passenger's side is touched, all doors are unlocked.
		ALL	When the touch sensor (unlock) on the driver's side is touched, all doors are unlocked. When the touch sensor (unlock) on the passenger's side is touched, all doors are unlocked.
Rear Gate Unlock Setting	Select	Select	When the rear gate opener button is pressed, only the rear gate is unlocked.
		ALL	When the rear gate opener button is pressed, all doors are unlocked.
Rear defogger operation mode	Normal	Normal	Automatically stops in 15 minutes after switch is turned to ON.
		Continuous	Repeats active condition for 15 minutes and inactive condition for 2 minutes until switch is turned to OFF.
Security Alarm Setup	ON	ON	Security alarm (hazard, horn or siren) in active condition
		OFF	Security alarm in inactive condition
Impact Sensor Setup	OFF	ON	Workable when Impact Sensor Setup is set to "ON". Impact sensor function becomes activated.
		OFF	Impact sensor in inactive condition (Set to "OFF" in models without sensors.)
Alarm delay setup	ON		After the keyless lock operation, the alarm monitor starts after the following delay time has passed.
		ON	Delay time is 30 seconds.
		OFF	Delay time is 0 second.
Lockout prevention	ON	ON	key lockout prevention function is activated. (The function does not operate if safety knob is locked by hand.)
		OFF	Key lockout prevention function is deactivated.

# User Customizing

## BODY CONTROL SYSTEM (DIAGNOSTICS)

Data	Initial setting value	Customize setting	Note
Impact sensor (OP)	OFF	ON	Vehicle is controlled in impact sensor equipped mode. (Make sure to set to "OFF" for models without the impact sensor. When "ON", hazard, horn or siren become activated by keyless lock (alarm monitor start).)
		OFF	Vehicle is controlled in no impact sensor mode.
Buzzer sounding setting	ON	ON	When lock/unlock is selected by keyless entry system operation, buzzer operates.
		OFF	When lock/unlock is selected by keyless entry system operation, buzzer does not operate.
Abnormal warning lamp flashing setting	ON	ON	When lock/unlock is selected by keyless entry system operation, hazard blinks.
		OFF	When lock/unlock is selected by keyless entry system operation, hazard does not interlock.
Initial keyless setting	—	—	
		Execution	
Initial button setting	—	—	
		Execution	
Passive Alarm	OFF	ON	
		OFF	
Door open warning	ON	ON	
		OFF	
Dome Light Alarm Setting	OFF	ON	Room light illuminates interlocking with alarm.
		OFF	Room light does not illuminate interlocking with alarm.
Welcome Light Off Delay Time(Exiting)	30s	OFF/30s/60 s/90 s	Length of the lighting time can be set.
Welcome Light Off Delay Time(Approaching)	30s	OFF/30s/60 s/90 s	Length of the lighting time can be set.
Key less buzzer volume	5	1 — 7	Buzzer volume can be set.

\*1: Customization item according to the actual vehicle equipment

6) After setting, make sure that vehicle equipment is same as the setting changed in the {Current Data Display & Save}.

### CAUTION:

- The above settings must match the actual vehicle equipment.
- Do not change settings except for setting above while setting the functions.
- Be sure not to change Factory initial setting except when installing a new body integrated unit.

### NOTE:

For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".